







AD-5000512-01







Montage instructie  
Assembly instructions  
Instructions de montage  
Montageanweisung  
Instrucciones para el montaje  
Istruzioni di montaggio

**Print CB-08 driewegklep 24V/230V**  
**Print CB-08 3-way valve 24V/230V**  
**Carte électronique CB-08 vanne 3 voies 24V/230V**  
**Platine CB-08 3-Wege-Ventil 24V/230V**  
**Circuito impreso CB-08 válvula de 3 vías 24V/230V**  
**incl. Stampa CB-08 valvola a 3 vie 24V/230V**

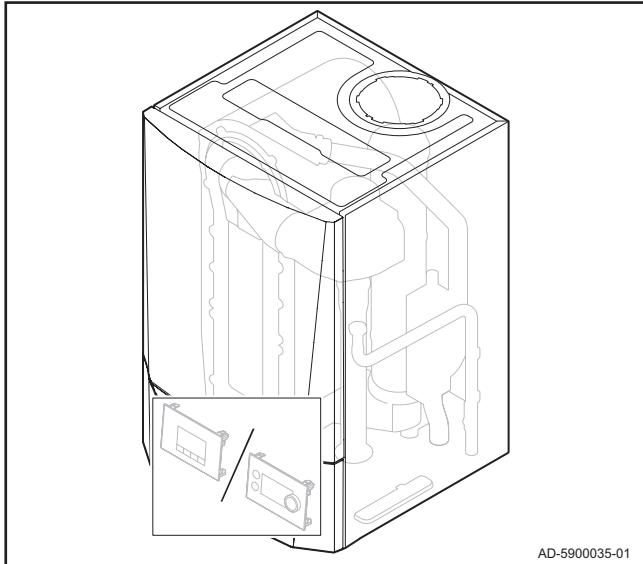


**Inhoud verpakking - Set contents - Contenu du kit  
Inhalt des Bauzates - Contenido del paquete - Contenuti del pacchetto**

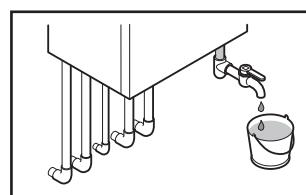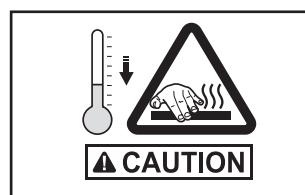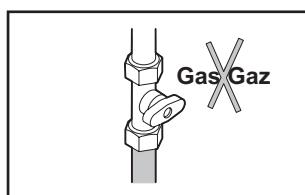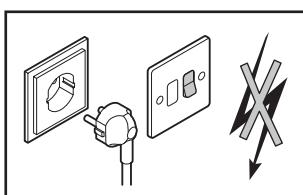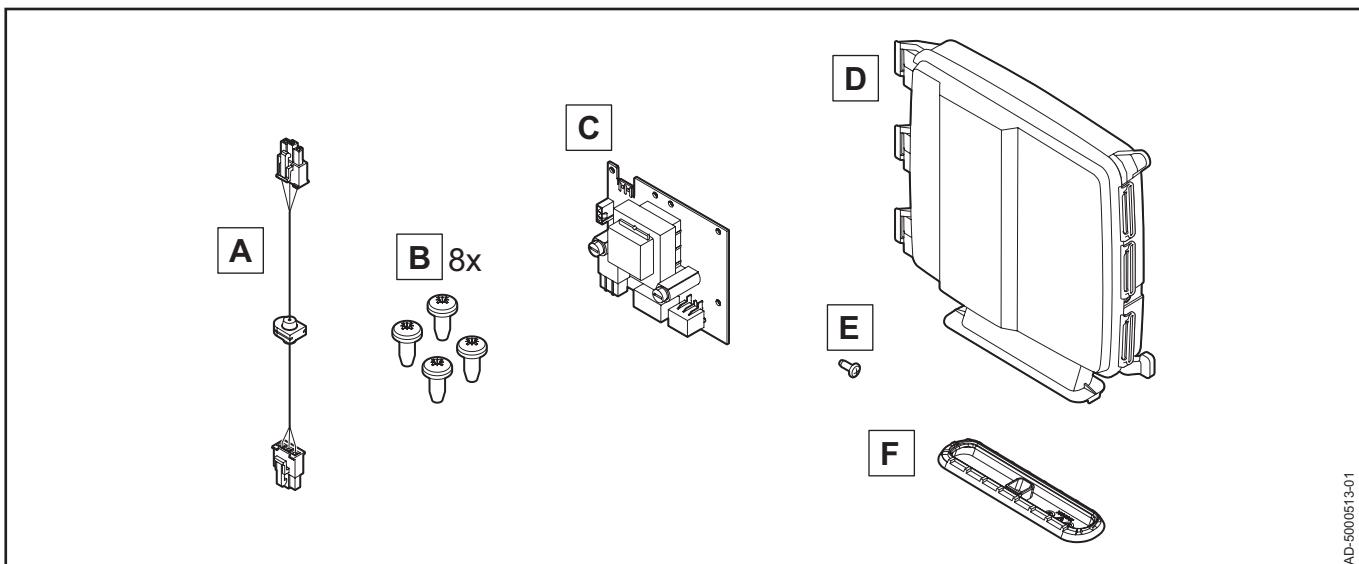


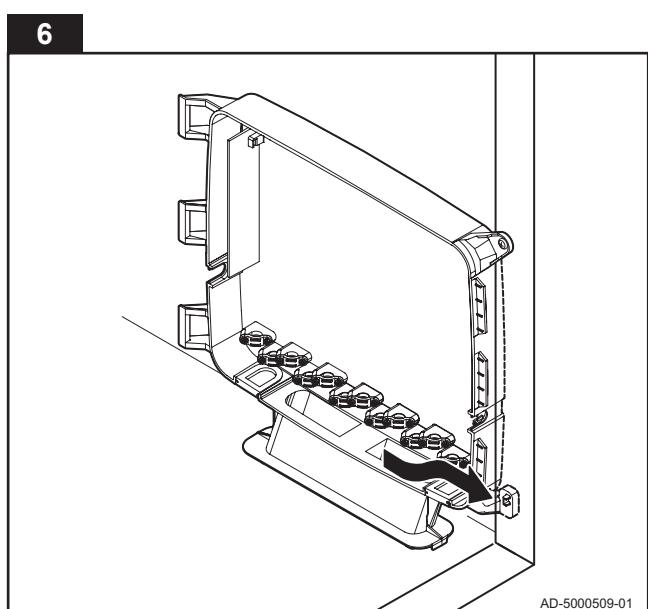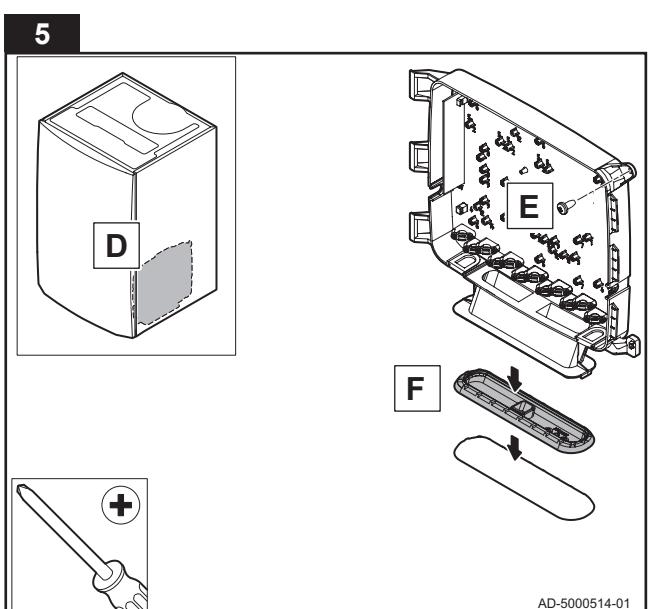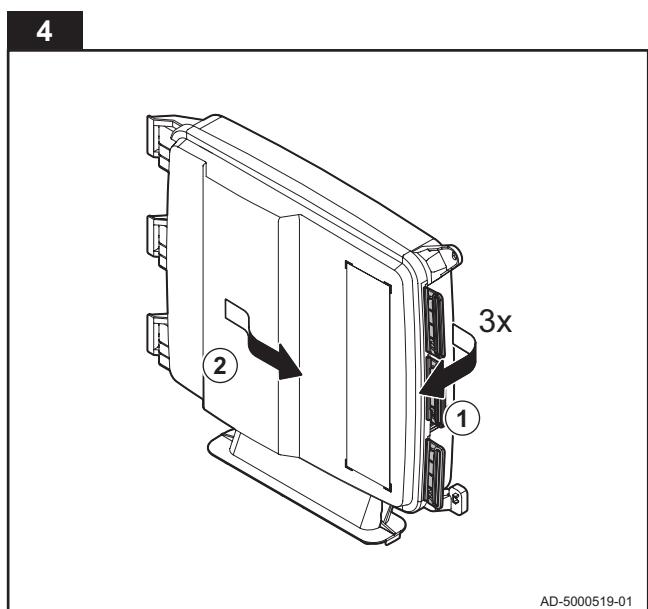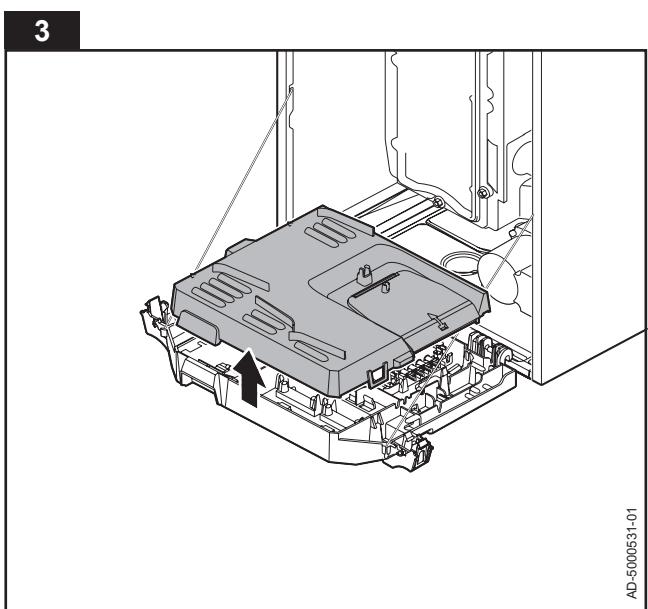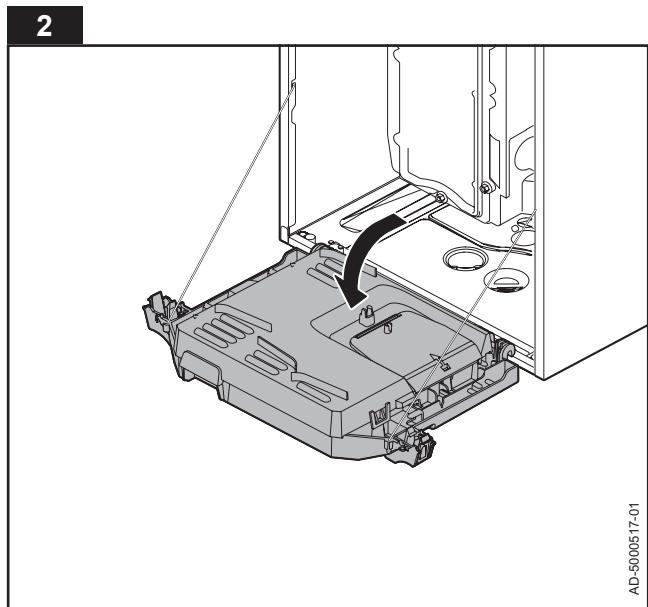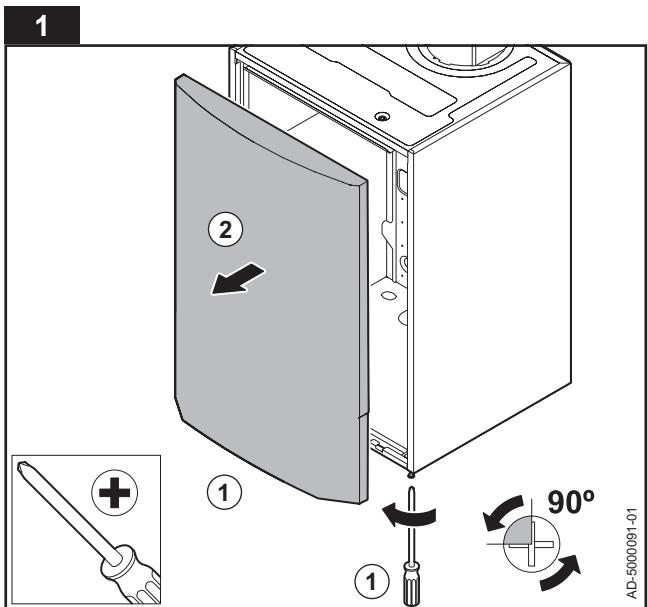


7

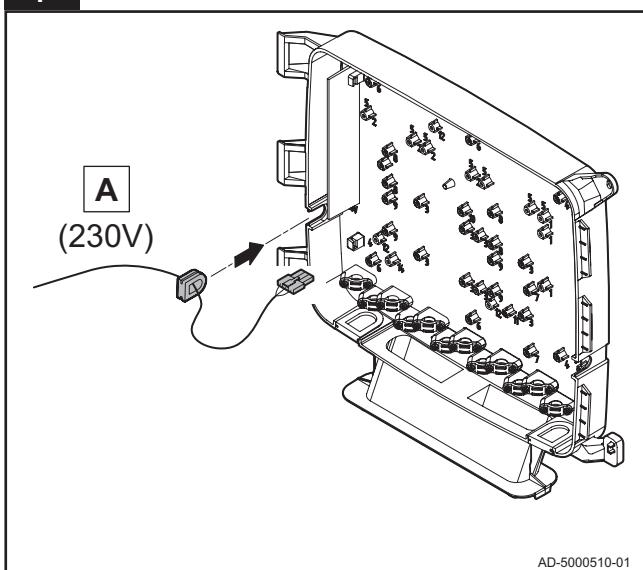

8

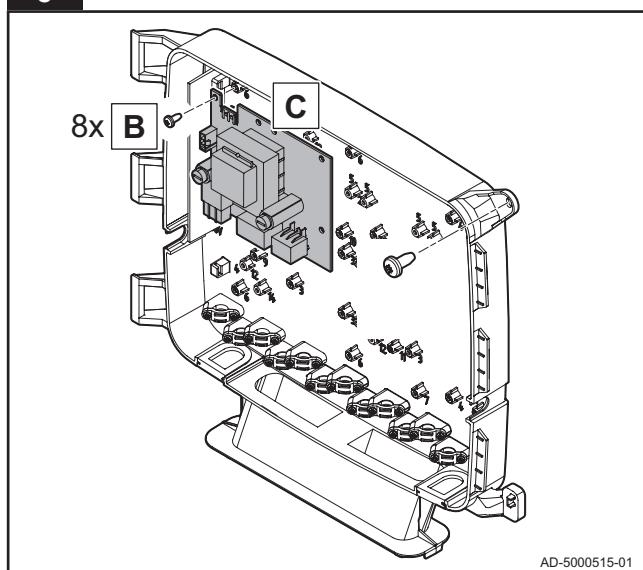

9

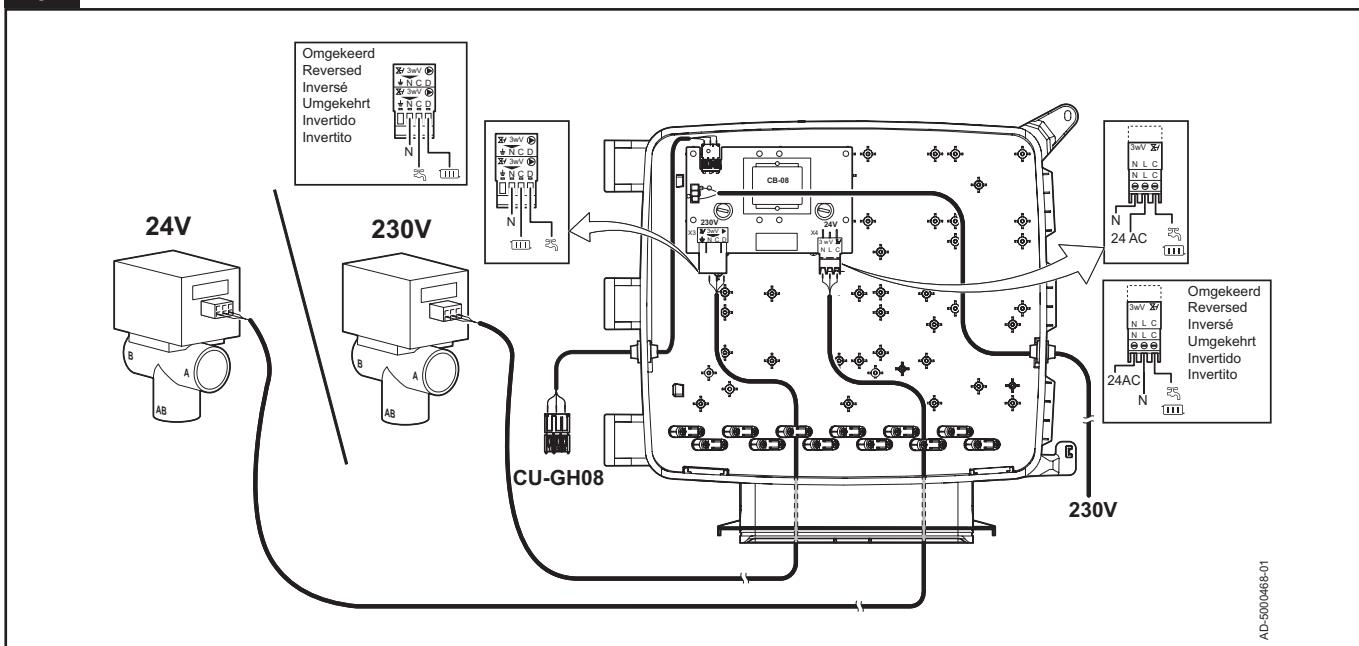

Om de draairichting van de **24V**-klep om te draaien, verwisselt u de aansluitingen **N** en **L**.  
 Om de draairichting van de **230V**-klep om te draaien, verwisselt u de aansluitingen **C** en **D**.






To reverse the direction of rotation of the **24V** valve, switch connections **N** and **L**.  
 To reverse the direction of rotation of the **230V** valve, switch connections **C** and **D**.


Pour inverser le sens de rotation de la vanne **24V**, commuter les connexions **N** et **L**.  
 Pour inverser le sens de rotation de la vanne **230V**, commuter les connexions **C** et **D**.

Um die Drehrichtung für das **24V**-Ventil umzudrehen, die Anschlüsse **N** und **L** vertauschen.  
 Um die Drehrichtung für das **230V**-Ventil umzudrehen, die Anschlüsse **C** und **D** vertauschen.




Para invertir la dirección de rotación de la válvula de **24V**, intercambiar las conexiones **N** y **L**.  
 Para invertir la dirección de rotación de la válvula de **230V**, intercambiar las conexiones **C** y **D**.

Per cambiare il senso di rotazione della valvola **24V**, invertire le connessioni **N** e **L**.  
 Per cambiare il senso di rotazione della valvola **230V**, invertire le connessioni **C** e **D**.

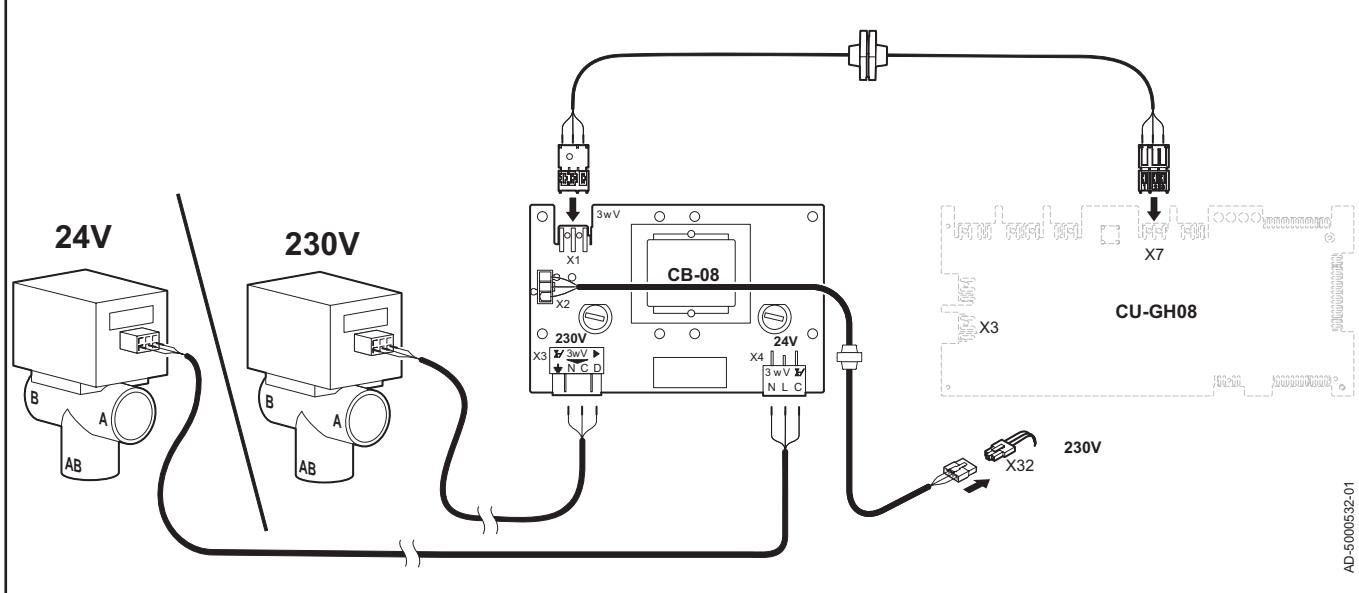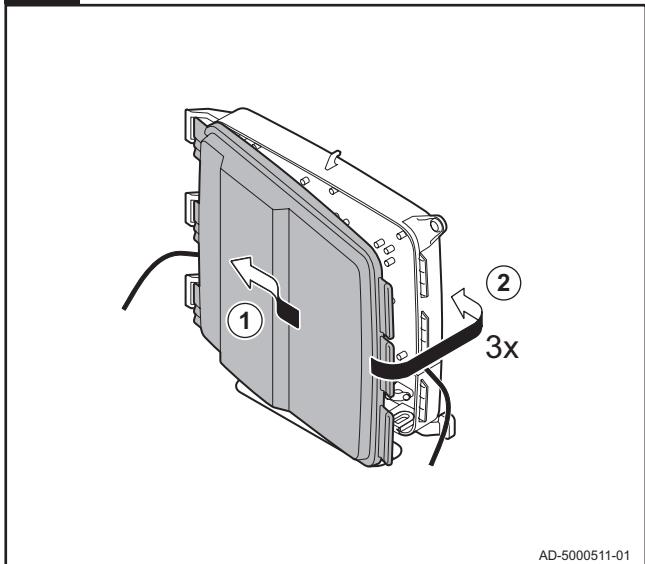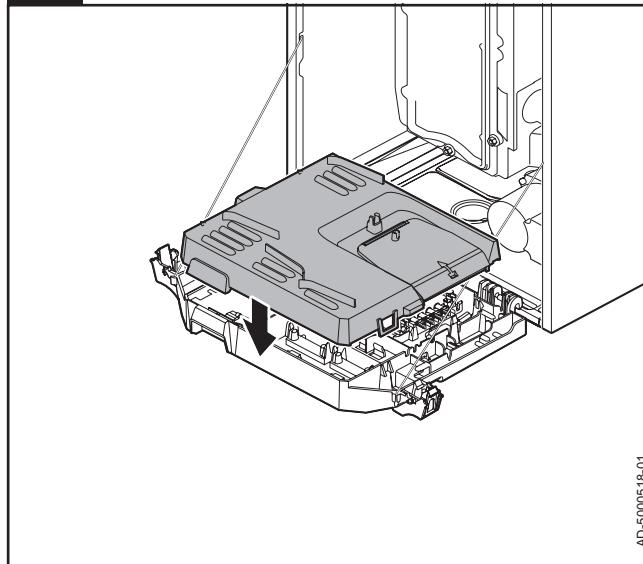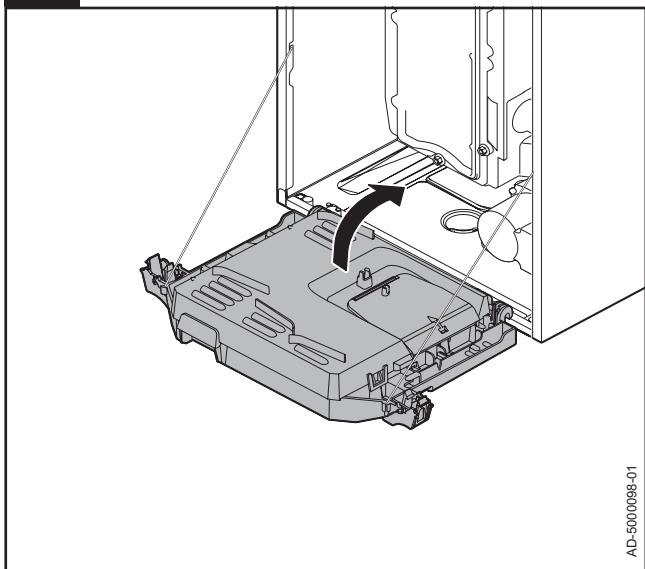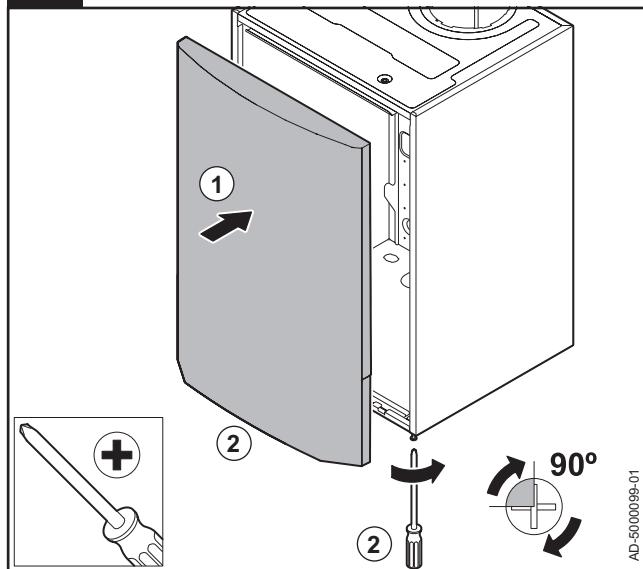**10****11****12****13****14**

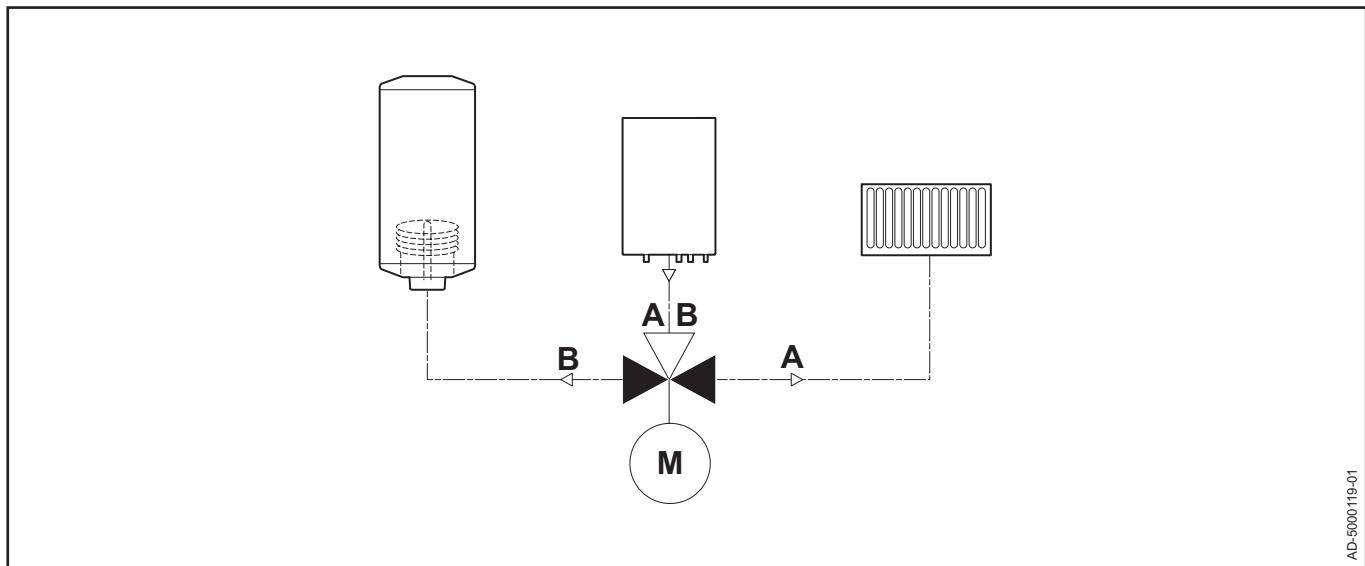

AD-5000119-01

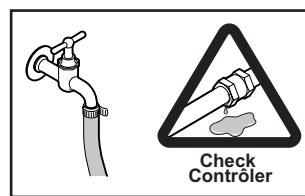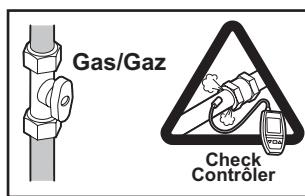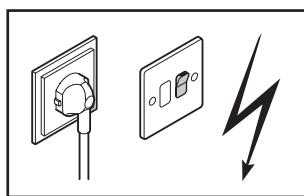

**Controleer de instelling van de parameter DP020, zie de installatie- en servicehandleiding van de ketel.**

**Check the parameter setting DP020, refer to the installation and service manual of the boiler.**

**Contrôler le réglage des paramètres DP020, se reporter à la notice d'installation et d'entretien de la chaudière.**

**Einstellung die Parameter DP020 prüfen, siehe Installations- und Wartungsanleitung des Heizkessels.**

**Comprobar el ajuste de parámetros DP020, consultar las instrucciones de instalación y mantenimiento de la caldera.**

**Controllare la regolazione dei parametri DP020, fare riferimento alle istruzioni di installazione e di manutenzione della caldaia.**



**© Copyright**

All technical and technological information contained in these technical instructions, as well as any drawings and technical descriptions supplied, remain our property and shall not be multiplied without our prior consent in writing.

Ours is a policy of continuous development. We reserve the right to alter specifications without prior notification.  
Subject to alterations.

