



Set up Auto-Tune – Video Transcript

Setting the Auto-Tune settings allows you to enter a channel number without entering zeroes first.

Step 1: Press the 'Menu Setting' button twice.

Step 2: Arrow down to the 'Set Up' option.

Step 3: Press the 'OK/Select' button.

Step 4: Press the 'OK/Select' button again when the Guide Setup is highlighted.

Step 5: Arrow down two times to 'Channel Entry Behavior.' If the field shows 'No Auto-Tune,' press the left button to change the field to 'Auto-Tune.' The field should show 'Auto-Tune.'

Step 6: Press the 'Exit' button on the lower right corner near the arrow buttons.

Step 7: Press the 'Exit' button to return to watching TV.

If you are still experiencing technical difficulties, please contact the Cable One Technical Care Center at support.cableone.net for more assistance.