

6" Jamb Clip Application Guide

for Stormwatch® Protection Windows with Pre-applied Extension Jamb

400
series

Limited Publication Release

Please read this guide completely before starting. For questions about this and other Andersen® products, call 1-888-888-7020.

For the most current version of this guide visit www.andersenwindows.com. Consult your local building code official for applicable building codes and regulations. Thank you for choosing Andersen® products.

Please leave this information with homeowner.

Parts Included


- Installation Guide
- Installation Pack
 - (10) Jamb Clips
 - (20) #8 x 5/8" Stainless Steel Screw
 - (20) #8 x 1" Stainless Steel Screw
 - (20) #8 x 1-1/4" Stainless Steel Screw

Tools Needed

- Safety Glasses
- Tape Measure
- Power Drill
- Phillips Drill Bit

Exploded Identification

- A** Jamb Clip
- B** #8 X 5/8" Stainless Steel Screw
(for Tilt-Wash Windows - Head/Side Jamb Only)
- C** #8 X 1" Stainless Steel Screw
(for Casement and Awning Windows)
- D** #8 X 1-1/4" Stainless Steel Screw
(for Specialty Windows) and (Tilt-Wash Windows - Sill Only)

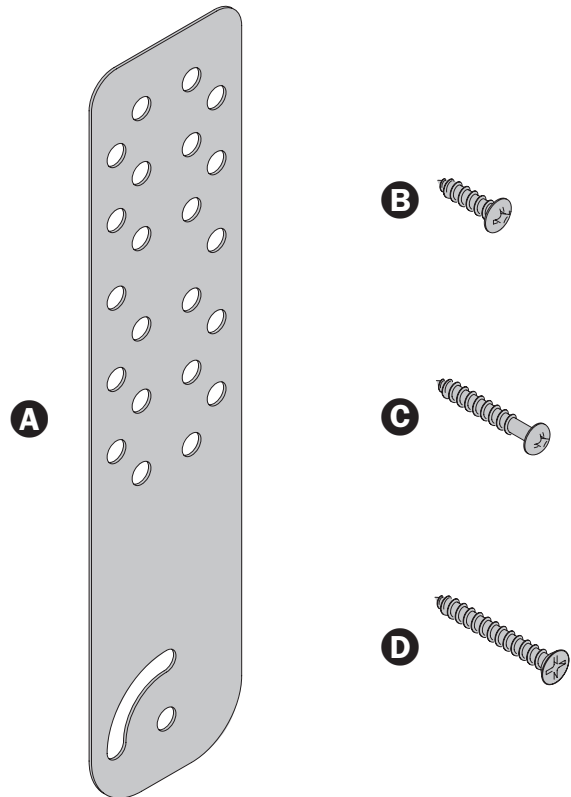

► See instruction guide (included with basic Stormwatch® unit) for window installation.

Read and follow these warnings during installation.

⚠ WARNING

Use a reasonable number of people with sufficient strength when moving and installing units. Always use safe lifting techniques. Failure to do so may result in injury and/or product damage.

⚠ WARNING

Follow manufacturer's instructions for safe operation of hand/power tools. Always wear safety glasses. Failure to do so may result in injury and/or product damage.

CAUTION

Use correct screws for jamb clip attachment identified in this guide to prevent damage to unit.

1**Interior**

Jamb Clip

8 x 5/8"
SS Screws
(Head/Side
Jambs Only)8 x 1- 1/4"
SS Screws
(Sill Only)

2-1/4"

Installation
Flange

Sill

Head

Tilt-Wash Window

Jamb Clip

8 x 1"
SS ScrewsInstallation
Flange**Casement/Awning Window**

Jamb Clip

8 x 1-1/4"
SS ScrewsInstallation
Flange**Specialty Window**

Check basic Stormwatch® unit installation guide for jamb clip quantity and location. Measure 2-1/4" up from back of installation flange and fasten jamb clip to unit using two screws per clip of the correct size and type as shown.

2**Interior**

90°

Jamb Clip
(Shipping)

90°

Jamb Clip
(Installation)**3****Interior****Tilt-Wash****Casement/
Awning**Screw
(By others)Jamb Clip
(Bent into position)**Specialty**

Rotate jamb clips toward installation flange for repackaging or transporting. Rotate jamb clips away from installation flange for installation as shown.

Install unit into rough opening following instruction guide (included with basic Stormwatch® unit). Bend jamb clip into position for fastening to rough opening. Secure unit as shown using screws called out in basic Stormwatch® unit installation guide.