

# BAXI



## Service manual

### High-efficiency wall-hung gas boiler

**Quinta Ace**

135

160

HMI T-control

Dear Customer,

Thank you very much for buying this appliance. Please read through the manual carefully before using the product, and keep it in a safe place for later reference. In order to ensure continued safe and efficient operation we recommend that the product is serviced regularly. Our service and customer service organisation can assist with this. We hope you enjoy years of problem-free operation with the product.

# Contents

<b>1</b>	<b>About this manual</b>	<b>5</b>
1.1	Additional documentation	5
1.2	Symbols used in the manual	5
<b>2</b>	<b>Description of the product</b>	<b>5</b>
2.1	General description	5
2.2	Operating principle	6
2.2.1	Gas/air regulation	6
2.2.2	Combustion	6
2.2.3	Control system	6
2.2.4	Control	6
2.2.5	Regulating the water temperature	6
2.2.6	Protection against shortage of water	7
2.2.7	Water flow	7
2.2.8	Hydraulic pressure sensor	7
2.2.9	Air pressure differential switch	7
2.2.10	Circulating pump	7
2.2.11	Calorifier connection	7
2.2.12	Cascade system	7
2.3	Main components	8
2.4	Introduction to the e-Smart controls platform	8
<b>3</b>	<b>Use of the control panel</b>	<b>9</b>
3.1	Control panel components	9
3.2	Description of the home screen	9
3.3	Description of the main menu	10
3.4	Description of the icons in the display	10
<b>4</b>	<b>Installer instructions</b>	<b>11</b>
4.1	Accessing the user level menus	11
4.2	Accessing the installer level	12
4.3	Commissioning the appliance	12
4.3.1	Chimney sweep menu	13
4.3.2	Saving the commissioning settings	14
4.4	Configuring the installation at installer level	14
4.4.1	Changing the control panel settings	15
4.4.2	Setting the installer details	15
4.4.3	Setting the parameters	15
4.4.4	Setting the heating curve	16
4.4.5	Increasing the domestic hot water temperature temporarily	16
4.5	Maintaining the installation	17
4.5.1	Viewing the service notification	17
4.5.2	Reading out measured values	17
4.5.3	Viewing production and software information	17
4.5.4	Manual deaeration	18
4.6	Resetting or restoring settings	18
4.6.1	Resetting the configuration numbers CN1 and CN2	18
4.6.2	Carrying out an auto detect	19
4.6.3	Restoring the commissioning settings	19
4.6.4	Resetting to factory settings	19
<b>5</b>	<b>Installation examples</b>	<b>20</b>
5.1	The SCB-01 expansion PCB	20
<b>6</b>	<b>Settings</b>	<b>20</b>
6.1	Introduction to parameter codes	20
6.2	Searching the parameters, counters and signals	20
6.3	List of parameters	21
6.3.1	CU-GH06c control unit parameters	21
6.3.2	SCB-01 expansion PCB parameters	25
6.4	List of measured values	26
6.4.1	CU-GH06c control unit counters	26
6.4.2	SCB-01 expansion PCB counters	27
6.4.3	CU-GH06c control unit signals	27

6.4.4	SCB-01 expansion PCB signals	31
6.4.5	Status and sub-status	31
<b>7</b>	<b>Maintenance</b>	<b>33</b>
7.1	Maintenance regulations	33
7.2	Maintenance message	34
7.3	Standard inspection and maintenance operations	34
7.3.1	Checking the water pressure	34
7.3.2	Checking the water quality	34
7.3.3	Checking the ionisation current	34
7.3.4	Checking the flue gas discharge/air supply connections	35
7.3.5	Checking the combustion	35
7.3.6	Checking the air pressure differential switch	39
7.3.7	Checking the automatic air vent	40
7.3.8	Checking the burner and cleaning the heat exchanger	41
7.3.9	Cleaning the condensate collector	42
7.3.10	Cleaning the siphon	42
7.4	Specific maintenance work	42
7.4.1	Replacing the ionisation/ignition electrode	43
7.4.2	Checking the non-return valve	43
7.5	Finalising work	44
<b>8</b>	<b>Troubleshooting</b>	<b>45</b>
8.1	Error codes	45
8.1.1	Display of error codes	45
8.1.2	Warning	46
8.1.3	Blocking	46
8.1.4	Locking	49
8.2	Error history	53
8.2.1	Reading out and clearing the error history	53
<b>9</b>	<b>Technical specifications</b>	<b>54</b>
9.1	Electrical diagram	54
<b>10</b>	<b>Spare parts</b>	<b>55</b>
10.1	General	55
10.2	Parts	56

# 1 About this manual

## 1.1 Additional documentation

The following documentation is available in addition to this manual:

- Installation and user manual
- Water quality instructions

## 1.2 Symbols used in the manual

This manual contains special instructions, marked with specific symbols. Please pay extra attention when these symbols are used.



### **Danger**

Risk of dangerous situations that may result in serious personal injury.



### **Danger of electric shock**

Risk of electric shock that may result in serious personal injury.



### **Warning**

Risk of dangerous situations that may result in minor personal injury.



### **Caution**

Risk of material damage.



### **Important**

Please note: important information.

The symbols mentioned below are of lower importance, but they can help you navigate or give useful information.



### **See**

Reference to other manuals or pages in this manual.



Helpful information or extra guidance.



Direct menu navigation, confirmations will not be shown. Use if you are familiar with the system.

# 2 Description of the product

## 2.1 General description

The Quinta Ace boiler is a high-efficiency wall-hung gas boiler with the following properties:

- High-efficiency heating.
- Limited emissions of polluting substances.
- Ideal choice for cascade configurations.

The following boiler types are available:

Tab.1 Boiler types

Name	Output <sup>(1)</sup>
Quinta Ace 135	136 kW
Quinta Ace 160	161 kW
(1) Nominal output $P_n$ 50/30 °C	

## 2.2 Operating principle

---

### 2.2.1 Gas/air regulation

---

The boiler is equipped with a casing that also serves as an air box. The fan draws in the combustion air. The gas is injected into the venturi and mixed with the combustion air. The fan speed is controlled on the basis of the settings, the heat demand and the prevailing temperatures measured by the temperature sensors. The gas/air ratio control ensures an accurate mixture of the required amounts of gas and air. This provides optimum combustion over the entire heat input range. The gas/air mixture goes to the burner, where it is ignited by the ignition electrode.



#### Important

The combustion air supply is checked before each burner start, and at least once every 24 hours. During continuous operation (e.g. supplying process water), please note that the boiler control will reset every 24 hours.

### 2.2.2 Combustion

---

The burner heats the central heating water flowing through the heat exchanger. If the temperature of the flue gases is lower than the dew point (approx. 55°C), the water vapour condenses in the heat exchanger. The heat released during this condensation process (referred to as the latent or condensation heat) is also transferred to the central heating water. The cooled flue gases are discharged through the flue gas discharge pipe. The condensed water is discharged through a trap.

### 2.2.3 Control system

---

The **e-Smart** electronic control system ensures that your heating system is smart and reliable. This means that the boiler responds practically to negative environmental influences (such as limited water flow and air flow problems). In the event of such influences, the boiler will not go into lockout mode, but in the first instance will modulate back. Depending on the nature of the circumstances, a warning, blocking or lock-out may occur. The boiler continues to supply heat provided the situation is not dangerous. With this control system, your boiler is also equipped for remote control and monitoring.

### 2.2.4 Control

---

- **On/off control**

The heat input varies between the minimum and the maximum values on the basis of the flow temperature set on the boiler. It is possible to connect a 2-wire on/off thermostat or a power stealing thermostat to the boiler.

- **Modulating control**

The heat input varies between the minimum and the maximum values on the basis of the flow temperature determined by the modulating controller. The boiler output can be modulated with an appropriate modulating controller.

- **Analogue control (0 - 10 V)**

The heat input varies between the minimum and the maximum values on the basis of the voltage present at the analogue input.

### 2.2.5 Regulating the water temperature

---

The boiler is fitted with an electronic temperature control with a flow and return temperature sensor. The flow temperature can be adjusted between 20°C and 90°C. The boiler modulates back when the set flow temperature is reached. The switch-off temperature is the set flow temperature + 5°C.

## 2.2.6 Protection against shortage of water

The boiler is fitted with low water level protection based on temperature measurements. By modulating back when the water flow threatens to become insufficient, the boiler remains operational as long as possible. The boiler issues a warning in the event of no or too little water. With an insufficient flow  $\Delta T \geq 25 \text{ K}$  or too great an increase in the heat exchanger temperature sensor, the boiler goes into blocking mode.

## 2.2.7 Water flow

The modulating control of the boiler limits the maximum difference between the flow temperature and return temperature. In addition, a heat exchanger temperature sensor is mounted to monitor the minimum water flow. This limits the maximum increase in the heat exchanger temperature and monitors the maximum temperature difference between the flow, return and heat exchanger temperatures. As a result, the boiler is not affected by low water flow.

## 2.2.8 Hydraulic pressure sensor

The hydraulic pressure sensor records the water pressure in the boiler. Change the threshold value for the hydraulic pressure sensor using parameter **AP006**.


## 2.2.9 Air pressure differential switch

The air pressure differential switch is a protection against a blocked trap or blocked air supply/flue gas outlet.

Before start-up and when the boiler is in operation, the air pressure differential switch **APS** measures the difference in pressure between the measuring points on the condensate collector **p<sup>+</sup>** and the air box **p<sup>-</sup>**. If the pressure difference is greater than 6 mbar, then the boiler will lock out. After eliminating the cause of the breakdown, the boiler can be unlocked.

## 2.2.10 Circulating pump

Fig.1 Water resistance

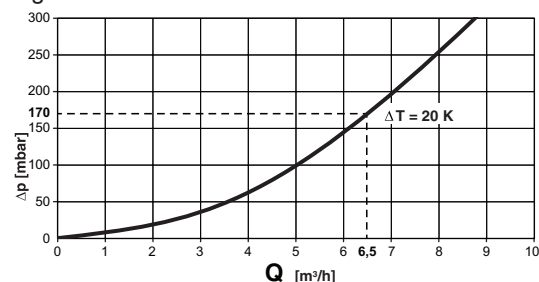

AD-0000857-02

**ΔP** Boiler resistance (mbar)

**Q** Flow rate (m³/h)

The boiler is supplied without a pump. Take the boiler resistance and system resistance into account when selecting a pump.



### Caution

Maximum power consumption may be 300 VA. Use an auxiliary relay for a pump with greater power.

## 2.2.11 Calorifier connection

A calorifier can be connected to the boiler. Our range includes various calorifiers.



### Important

Contact us for more information.

## 2.2.12 Cascade system

The boiler is ideally suited for a cascade system. There are a number of standard solutions available.


i

Important

Contact us for more information.

2.3 Main components

Fig.2 Main components

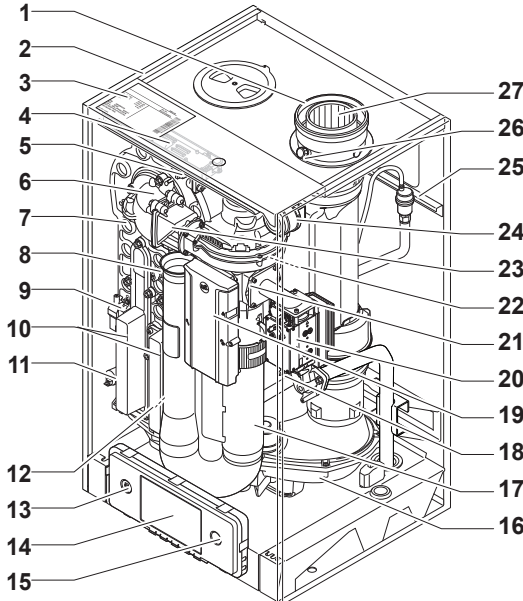

AD-0000218-04

1 Air inlet connection

2 Casing/air box

3 Type plate

4 LED interior light

5 Flow temperature sensor

6 Adapter

7 Heat exchanger

8 Temperature sensor for heat exchanger

9 Ignition transformer

10 Heat exchanger inspection cover

11 Water pressure sensor

12 Return temperature sensor

13 Service connector (PC connection)

14 Control panel

15 On/off switch

16 Condensate collector

17 Air inlet silencer

18 Gas pressure measuring point

19 Main PCB (CU-GH)

20 Gas control valve

21 Venturi

22 Fan

23 Non-return valve

24 Air pressure differential switch


25 Automatic air vent

26 Flue gas measuring point

27 Flue gas connection

2.4 Introduction to the e-Smart controls platform

The Quinta Ace boiler is equipped with the e-Smart controls platform. This is a modular system, and offers compatibility and connectivity between all products that make use of the same platform.

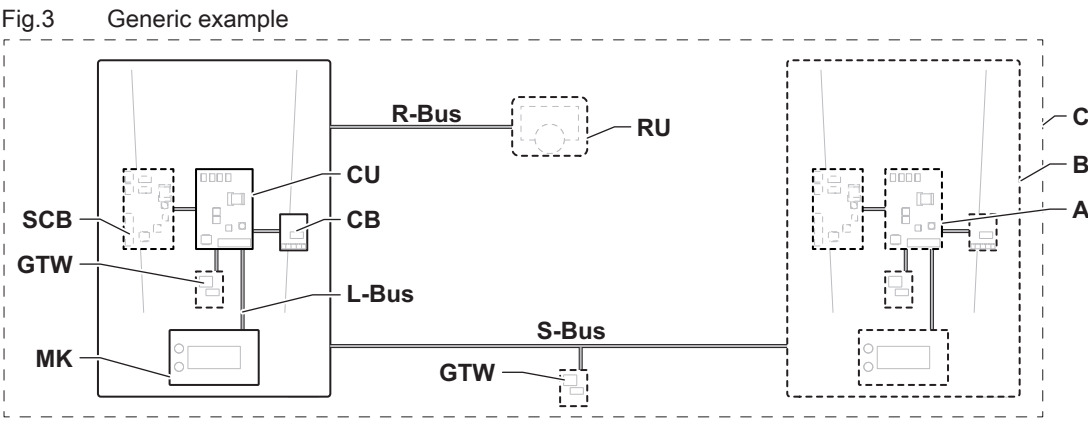

Tab.2 Components in the example

Item	Description	Function
CU	Control Unit: Control unit	The control unit handles all basic functionality of the appliance.
CB	Connection Board: Connection PCB	The connection PCB provides easy access to all connectors of the control unit.
SCB	Smart Control Board: Expansion PCB	An expansion PCB provides extra functionality, like an internal calorifier or multiple zones.

Item	Description	Function
<b>GTW</b>	Gateway: Conversion PCB	A gateway can be fitted to an appliance or system, to provide one of the following: <ul style="list-style-type: none"> <li>• Extra (wireless) connectivity</li> <li>• Service connections</li> <li>• Communication with other platforms</li> </ul>
<b>MK</b>	Control panel: Control panel and display	The control panel is the user interface to the appliance.
<b>RU</b>	Room Unit: Room unit (for example, a thermostat)	A room unit measures the temperature in a reference room.
<b>L-Bus</b>	Local Bus: Connection between devices	The local bus provides communication between devices.
<b>S-Bus</b>	System Bus: Connection between appliances	The system bus provides communication between appliances.
<b>R-Bus</b>	Room unit Bus: Connection to a room unit	The room unit bus provides communication to a room unit.
<b>A</b>	Device	A device is a PCB, control panel or a room unit.
<b>B</b>	Appliance	An appliance is a set of devices connected via the same L-Bus
<b>C</b>	System	A system is a set of appliances connected via the same S-Bus


Tab.3 Specific devices delivered with the Quinta Ace boiler

Name visible in display	Software version	Description	Function
FSB-WHB-HE-150-300	2.1	Control unit <b>CU-GH06c</b>	The CU-GH06c control unit handles all basic functionality of the Quinta Ace boiler.
MK3	1.85	Control panel <b>HMI T-control</b>	The HMI T-control is the user interface to the Quinta Ace boiler.
SCB-01	1.3	Expansion PCB <b>SCB-01</b>	The SCB-01 provides a 0-10 V connection for a PWM system pump and two potential-free contacts for status notification.

## 3 Use of the control panel

### 3.1 Control panel components

Fig.4 Control panel components

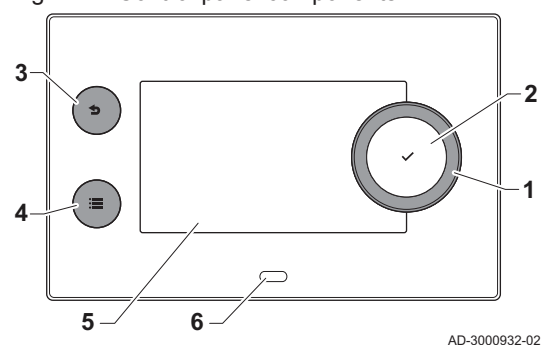

- 1 Rotary knob to select a tile, menu or setting
- 2 Confirm button ✓ to confirm the selection
- 3 Back button ➡:
  - **Short button press:** Return to the previous level or previous menu
  - **Long button press:** Return to home screen
- 4 Menu button ≡ to go to the main menu
- 5 Display
- 6 Status LED


### 3.2 Description of the home screen

This screen is shown automatically after start-up of the appliance. The control panel automatically enters standby mode (black screen) if the buttons are not used for 5 minutes. Press one of the buttons on the control panel to activate the screen again.

You can navigate from any menu to the home screen by pressing the back button ➡ for several seconds.

The tiles on the home screen provide quick access to the corresponding menus. Use the rotary knob to navigate to the desired item and press the button ✓ to confirm the selection.

Fig.5 Icons on home screen

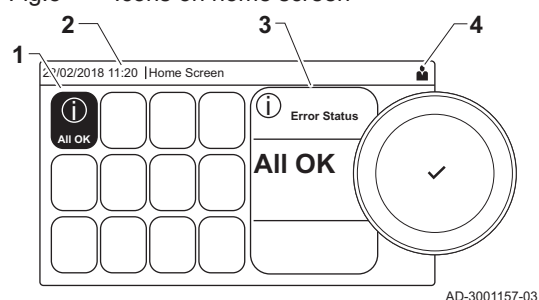


AD-3001157-03

- 1 Tiles: the selected tile is highlighted
- 2 Date and time | Name of the screen (actual position in the menu)
- 3 Information about the selected tile
- 4 Icons indicating navigation level, operating mode, errors and other information.

### 3.3 Description of the main menu

You can navigate from any menu directly to the main menu by pressing the menu button . The number of accessible menus depends on the access level (user or installer).

Fig.6 Items in the main menu

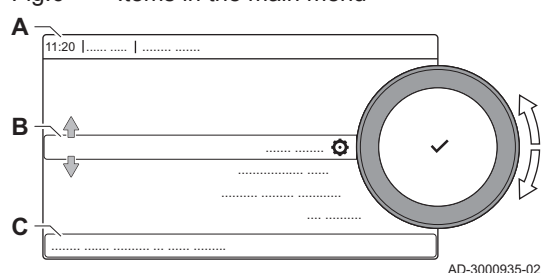

AD-3000935-02

- A Date and time | Name of the screen (actual position in the menu)
- B Available menus
- C Brief explanation of the selected menu

Tab.4 Available menus for the user

Description	Icon
Enable installer access	
System Settings	
Version Information	













Tab.5 Available menus for the installer

Description	Icon
Disable installer access	
Installation Setup	
Commissioning Menu	
Advanced Service Menu	
Error History	
System Settings	
Version Information	













### 3.4 Description of the icons in the display

Tab.6 Icons







Icon	Description
	User menu: user-level parameters can be configured.
	Installer menu: installer-level parameter can be configured.
	Information menu: read out various current values.
	System settings: system parameters can be configured.
	Error indicator.
	Gas boiler indicator.
	Domestic hot water tank is connected.
	The outdoor temperature sensor is connected.
	Boiler number in cascade system.
	The solar calorifier is on and its heat level is displayed.
	Burner output level (1 to 5 bars, with each bar representing 20% output).

Icon	Description
	The pump is running.
	Three-way valve indicator.
	Display of the system water pressure.
	Chimney sweep mode is enabled (forced full load or low load for O <sub>2</sub> measurement).
	Energy-saving mode is enabled.
	DHW boost is enabled.
	Timer program is enabled: The room temperature is controlled by a timer program.
	Manual mode is enabled: The room temperature is set to a fixed setting.
	Temporary overwrite of the timer program is enabled: The room temperature is changed temporarily.
	The holiday program (including frost protection) is active: The room temperature is reduced during your holiday to save energy.
	Frost protection is enabled: Protect the boiler and installation from freezing in winter.
	Service notification: service needed. Installer contact details are displayed or can be filled in.

Tab.7 Icons - On/off

Icon	Description	Icon	Description
	CH operation is enabled.		CH operation is disabled.
	DHW operation is enabled.		DHW operation is disabled.
	The burner is on.		The burner is off.
	Bluetooth enabled and connected (icon is non-transparent).		Bluetooth enabled and disconnected (icon is transparent).
	Heating enabled.		
	Cooling enabled.		
	Heating/cooling enabled.		Heating/cooling disabled.

Tab.8 Icons - Zones

Icon	Description
	All zones (groups) icon.
	Living room icon.
	Kitchen icon.
	Bedroom icon.
	Study icon.
	Cellar icon.

## 4 Installer instructions

### 4.1 Accessing the user level menus

The tiles on the home screen provide quick access for the user to the corresponding menus.

Fig.7 Menu selection


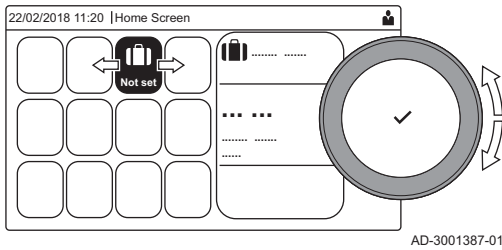


Fig.8 Confirm menu selection

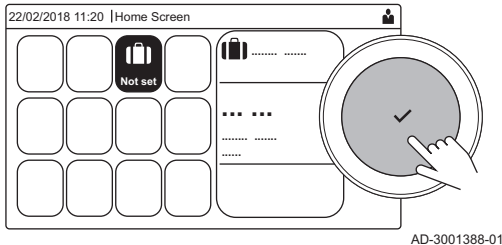

1. Use the rotary knob to select the required menu.

2. Press the ✓ button to confirm the selection.

⇒ The available settings of this selected menu appear in the display.

3. Use the rotary knob to select the desired setting.

4. Press the ✓ button to confirm the selection.

⇒ All options for change will appear in the display (if a setting cannot be changed, **Cannot edit read-only datapoint** will appear in the display).

5. Use the rotary knob to change the setting.

6. Press the ✓ button to confirm the selection.

7. Use the rotary knob to select the next setting or press the ↻ button to return to the home screen.

## 4.2 Accessing the installer level

Some settings are protected by installer access. Enable installer access in order to change these settings.



Use the rotary knob to navigate.

Use the ✓ button to confirm your selection.


1. Access the installer level via the tile:

1.1. Select the tile [🔧].

1.2. Use code: **0012**.

⇒ The tile [🔧] shows that the installer access is **On**, and the icon in the top right of the display changes into 🔧.

Fig.9 Installer level

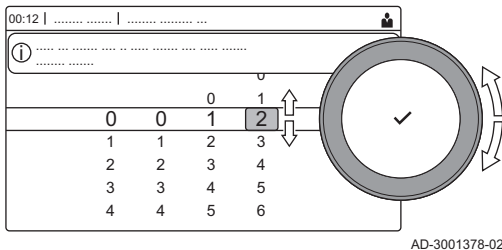


2. Access the installer level via the menu:

2.1. Select **Enable installer access** from the **Main Menu**.

2.2. Use code: **0012**.

⇒ When the installer level is enabled or disabled, the status of the tile [🔧] changes into **On** or **Off**.

Fig.10 Installer level

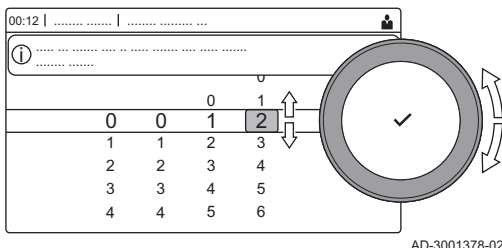

When the control panel is not used for 30 minutes, the installer access is disabled automatically. You can manually disable installer access by:

- Selecting the tile [🔧].
- Selecting **Disable installer access** from the **Main Menu**.

## 4.3 Commissioning the appliance

At first start-up of the appliance, the display will show the commissioning wizard. Depending on the appliance, some steps take a few minutes to complete, for example appliances that need to deaerate after installation or need to configure a boiler.



Use the rotary knob to navigate.

Use the ✓ button to confirm your selection.

1. Start up the appliance.

2. Follow the instructions on the display.



### Important


The appliance might take a few minutes during certain steps while commissioning. Do not shut off the appliance or try to bypass steps, unless stated otherwise on the display.

3. You can access individual commissioning steps:
  - 3.1. Press the button.
  - 3.2. Select **Commissioning Menu**.
  - 3.3. Select the commissioning step you wish to perform.

## 4.3.1 Chimney sweep menu

Select the tile to open the chimney sweep menu. The **Change load test mode** menu will appear:

Fig.11 Load test

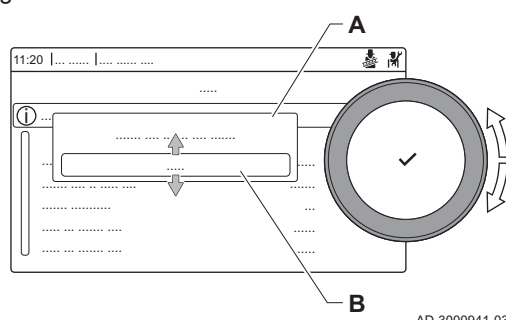

- A Change load test mode  
B Load test mode

AD-3000941-03

Tab.9 Load tests in the chimney sweep menu

Change load test mode	Settings
Off	No test
Low power	Part load test
Medium power	Full load test for Central Heating mode
High power	Full load test for Central Heating + Domestic Hot Water mode


Tab.10 Load test settings

Load Test menu	Settings
Func. test status	Select the load test to start the test.
System Flow Temp	Read the central heating flow temperature
T return	Read the central heating return temperature
Actual fan RPM	Read the actual fan speed
Actual flame current	Read the actual flame current
Fan RPM Max CH	Adjust the maximum fan speed during Central Heating mode
Fan RPM Min	Adjust the minimum fan speed during Central Heating + Domestic Hot Water mode
Fan RPM Start	Adjust the start fan speed

### ■ Performing the full load test


1. Select the tile .  
⇒ The **Change load test mode** menu appears.

Fig.12 Full load test

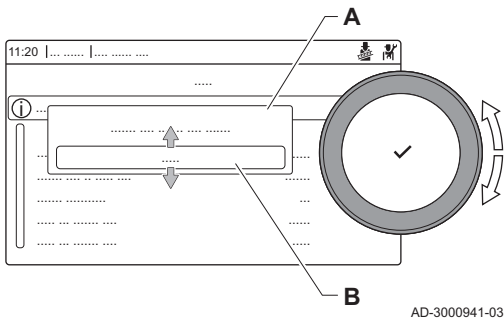

2. Select the test **Medium power**.


- A Change load test mode
- B Medium power


⇒ The full load test starts. The selected load test mode is shown in the menu and the icon  appears in the top right of the screen.

3. Check the load test settings and adjust if necessary.

⇒ Only the parameters shown in bold can be changed.


#### ■ Performing the low load test

1. If the full load test is still running, press the  button to change the load test mode.

2. If the full load test was finished, select the tile  to restart the chimney sweep menu.


- A Change load test mode
- B Low power

3. Select the **Low power** test in the menu **Change load test mode**.

⇒ The low load test starts. The selected load test mode is shown in the menu and the icon  appears in the top right of the screen.


4. Check the load test settings and adjust if necessary.

⇒ Only the parameters shown in bold can be changed.

5. End the low load test by pressing the  button.


⇒ The message **Running load test(s) stopped!** is displayed.

Fig.13 Low load test

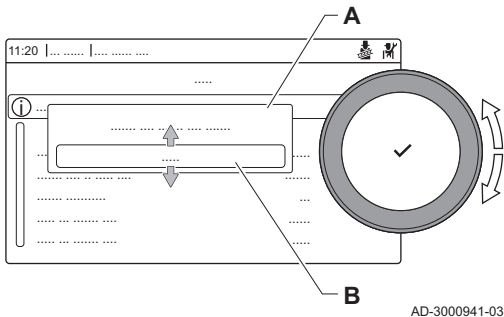


### 4.3.2 Saving the commissioning settings


You can save all current settings on the control panel. These settings can be restored if necessary, for example after replacement of the control unit.

▶▶  > **Advanced Service Menu** > **Save as commissioning settings**





Use the rotary knob to navigate.

Use the  button to confirm your selection.




1. Press the  button.
2. Select **Advanced Service Menu**.
3. Select **Save as commissioning settings**.
4. Select **Confirm** to save the settings.

When you have saved the commissioning settings, the option **Revert commissioning settings** becomes available in the **Advanced Service Menu**.

### 4.4 Configuring the installation at installer level

Configure the installation by pressing the  button and selecting **Installation Setup** . Select the control unit or circuit board you want to configure:

Tab.11

Icon	Zone or function	Description
	CIRCA / CH	Central heating circuit
	Commercial boiler	Gas boiler
	Gas fired appliance	Gas boiler

Tab.12 Configuring a zone or function of CU-GH08

Parameters, counters, signals	Description
Parameters	Set the parameters at installer level
Counters	Read the counters at installer level
Signals	Read the signals at installer level

#### 4.4.1 Changing the control panel settings

You can change the control panel settings within system settings.

▶▶ ≡ > **System Settings**



Use the rotary knob to navigate.

Use the ✓ button to confirm your selection.

1. Press the ≡ button.
2. Select **System Settings** ⚙️.
3. Perform one of the operations described in the table below:

Tab.13 Control panel settings

System Settings menu	Settings
Set Date and Time	Set the current date and time
Select Country and Language	Select your country and language
Daylight Saving Time	Enable or disable daylight saving time. When enabled daylight saving time will update the systems internal time to correspond with summer and winter time.
Installer Details	Read out the name and phone number of the installer
Set Heating Activity Names	Create the names for the activities of the timer program
Set Screen Brightness	Adjust the brightness of the screen
Set click sound	Enable or disable the click sound of the rotary knob
License Information	Read out detailed license information from the device platform application

#### 4.4.2 Setting the installer details

You can store your name and phone number in the control panel to be read by the user. When an error occurs these contact details will be displayed.

▶▶ ≡ > **System Settings > Installer Details**



Use the rotary knob to navigate.

Use the ✓ button to confirm your selection.

1. Press the ≡ button.  
Enable installer access if it is not enabled.
  - 1.1. Select **Enable installer access**.
  - 1.2. Use code **0012**.
2. Select **System Settings** ⚙️.
3. Select **Installer Details**.
4. Enter the following data:

Installer name	Your company's name
Installer phone	Your company's phone number

#### 4.4.3 Setting the parameters

You can change the settings of the control unit and the connected expansion boards, sensors etc. to configure the installation. The factory settings support the most common heating systems. The user or the installer can optimise the parameters as required.

**Important**

Changing the factory settings may adversely affect the operation of the installation.

►► ≡ > **Installation Setup** > select zone or device > **Parameters, counters, signals** > **Parameters**



Use the rotary knob to navigate.

Use the ✓ button to confirm your selection.

1. Press the ≡ button.
2. Select **Installation Setup**.
3. Select the zone or device you want to configure.
4. Select **Parameters, counters, signals**.
5. Select **Parameters**.

**A** - **Parameters**


- **Counters**

- **Signals**

**B** List of settings or values

⇒ The list of available parameters is displayed.

Fig.14 Parameters, counters, signals

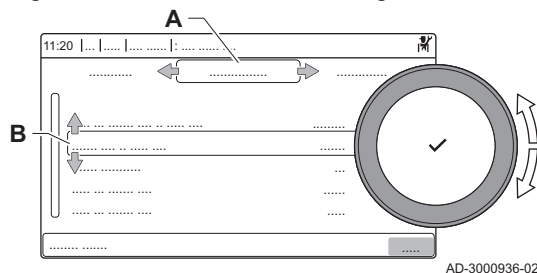

#### 4.4.4 Setting the heating curve

When an outdoor temperature sensor is connected to the installation, the relation between the outdoor temperature and the central heating flow temperature is controlled by a heating curve. This curve can be adjusted to the requirements of the installation.

►► Select zone > **Heating Curve**




Use the rotary knob to navigate.

Use the ✓ button to confirm your selection.

1. Select the tile of the zone you want to configure.
2. Select **Control strategy**.
3. Select the setting **Outdoor Temp. based** or **Outdoor & room based**.  
⇒ The option **Heating Curve** appears in the **Zone setup** menu.
4. Select **Heating Curve**.  
⇒ A graphic display of the heating curve is shown.
5. Adjust the following parameters:

Fig.15 The heating curve

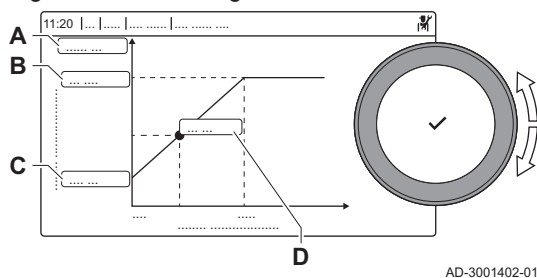

Tab.14 Settings

<b>A</b>	<b>Slope:</b>	Slope of the heating curve: • Underfloor heating circuit: slope between 0.4 and 0.7 • Radiator circuit: slope at approximately 1.5
<b>B</b>	<b>Max:</b>	Maximum temperature of the heating circuit
<b>C</b>	<b>Base:</b>	Ambient temperature setpoint
<b>D</b>	xx°C ; xx°C	Relationship between the heating circuit flow temperature and the outdoor temperature. This information is visible throughout the slope.

#### 4.4.5 Increasing the domestic hot water temperature temporarily

You can temporary increase the hot water temperature when the time program is active with the reduced temperature setpoint. Use this to deviate from the time program or testing of the hot water production.

►► ≡ > **Installation Setup** > **Internal DHW** > **Hot water boost** > **Duration of temporary overwrite**



Use the rotary knob to navigate.  
Use the ✓ button to confirm your selection.

1. Press the ≡ button.
2. Select **Installation Setup**.
3. Select **Internal DHW**.
4. Select **Hot water boost**.
5. Select **Duration of temporary overwrite**.
6. Set the duration in hours and minutes.
  - ⇒ The hot water temperature is increased to the **DHW comfort setpoint**.

You can abort the temporary increase by selecting **Reset**.

## 4.5 Maintaining the installation

### 4.5.1 Viewing the service notification

When a service notification appears on the display, you can view the details of the notification.



Use the rotary knob to navigate.  
Use the ✓ button to confirm your selection.

1. Select the tile [🔧].
  - ⇒ The **View Service Notification** menu opens.
2. Select the parameter or value you want to view.

### 4.5.2 Reading out measured values

The appliance continually registers various measured values from the system. You can read these values on the control panel.

►► ≡ > **Installation Setup** > select zone or device > **Parameters, counters, signals** > **Counters** or **Signals**




Use the rotary knob to navigate.  
Use the ✓ button to confirm your selection.

1. Press the ≡ button.
2. Select **Installation Setup**.
  - Enable installer access if **Installation Setup** is not available.
    - 2.1. Select **Enable installer access**.
    - 2.2. Use code **0012**.
3. Select the zone or device you want to read out.
4. Select **Parameters, counters, signals**.
5. Select **Counters** or **Signals** to read out a counter or signal.

- A** - **Parameters**  
 - **Counters**  
 - **Signals**  
**B** List of settings or values

Fig.16 Parameters, counters, signals

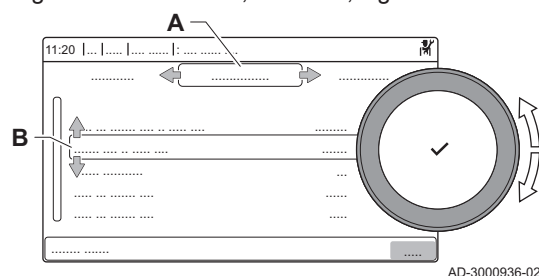

### 4.5.3 Viewing production and software information

You can read details about the production dates, hardware and software versions of the appliance and all connected devices.

►► ≡ > **Version Information**




Use the rotary knob to navigate.  
Use the ✓ button to confirm your selection.

1. Press the ≡ button.
2. Select **Version Information**.
3. Select the appliance, control board or any other device you want to view.

**A** Select the appliance, control board or device  
**B** List of information

4. Select the information you want to view.

Fig.17 Version information

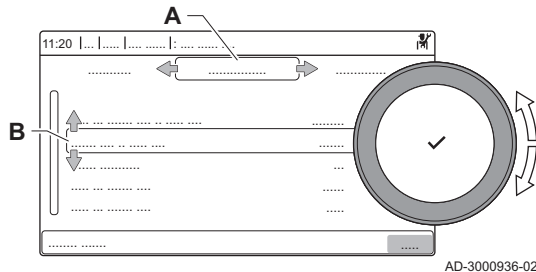

#### 4.5.4 Manual deaeration

You can manually deaerate your appliance.

►► ≡ > **Commissioning Menu > Deaeration program**



Use the rotary knob to navigate.  
Use the ✓ button to confirm your selection.

1. Press the ≡ button.
2. Select **Commissioning Menu**.
3. Select **Deaeration program**.  
⇒ The manual de-aeration menu opens.
4. Follow the instructions on the display.



You can press and hold ↺ to abort the procedure.

## 4.6 Resetting or restoring settings

### 4.6.1 Resetting the configuration numbers CN1 and CN2

The configuration numbers must be reset when indicated by an error message or when the control unit has been replaced. The configuration numbers can be found on the data plate of the appliance.



**Important**

All custom settings will be erased when the configuration numbers are reset. Depending on the appliance, there can be factory set parameters to enable certain accessories.


- Use the saved commissioning settings to restore these settings after the reset.
- If no commissioning settings were saved, write down custom settings before resetting. Include all relevant accessory related parameters.

►► ≡ > **Advanced Service Menu > Set Configuration Numbers**



Use the rotary knob to navigate.  
Use the ✓ button to confirm your selection.

Fig.18 Configuration numbers

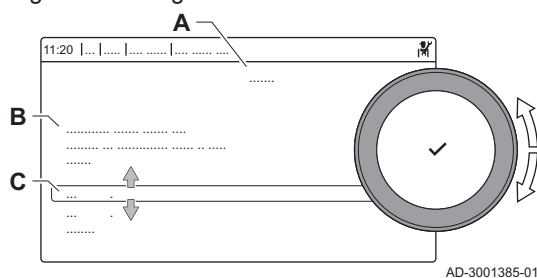

- A Select the control unit
- B Extra information
- C Configuration numbers

1. Press the button.
2. Select **Advanced Service Menu**.
3. Select **Set Configuration Numbers**.
4. Select the device you want to reset.
5. Select and change the **CN1** setting.
6. Select and change the **CN2** setting.
7. Select **Confirm** to confirm the changed numbers.

#### 4.6.2 Carrying out an auto detect

The auto detect-function scans the installation for devices and other appliances connected to the L-Bus and S-Bus. You can use this function when a connected device or appliance has been replaced or removed from the installation.

- ▶▶ > **Advanced Service Menu** > **Auto Detect**



- Use the rotary knob to navigate.
- Use the button to confirm your selection.

1. Press the button.
2. Select **Advanced Service Menu**.
3. Select **Auto Detect**.
4. Select **Confirm** to carry out the auto-detect.

#### 4.6.3 Restoring the commissioning settings

This option is only available when the commissioning settings were saved on the control panel and allows you to restore these settings.

- ▶▶ > **Advanced Service Menu** > **Revert commissioning settings**



- Use the rotary knob to navigate.
- Use the button to confirm your selection.

1. Press the button.
2. Select **Advanced Service Menu**.
3. Select **Revert commissioning settings**.
4. Select **Confirm** to restore the commissioning settings.

#### 4.6.4 Resetting to factory settings

You can reset the appliance to the default factory settings.

- ▶▶ > **Advanced Service Menu** > **Reset to Factory Settings**




- Use the rotary knob to navigate.
- Use the button to confirm your selection.

1. Press the button.
2. Select **Advanced Service Menu**.
3. Select **Reset to Factory Settings**.
4. Select **Confirm** to restore the factory settings.

## 5 Installation examples

### 5.1 The SCB-01 expansion PCB

Fig.19 SCB-01 PCB

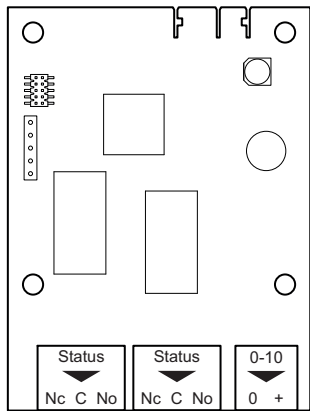

The SCB-01 has the following features:


- Two potential free contacts for status notifications
- 0–10 V output connection for a PWM system pump

Expansion PCBs are automatically recognised by the control unit of the boiler. If expansion PCBs are removed, the boiler will show an error code. To resolve this error, an auto-detect must be carried out after removal.

## 6 Settings

### 6.1 Introduction to parameter codes

Fig.20 Code on a HMI T-control

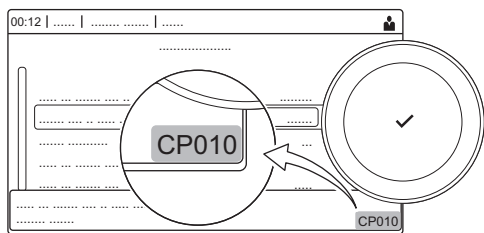

The controls platform makes use of an advanced system to categorise parameters, measurements and counters. Knowing the logic behind these codes, makes it easier to identify them. The code consists of two letters and three numbers.

Fig.21 First letter

**CP010**  
AD-3001375-01

The first letter is the category the code relates to.

- A** Appliance: Appliance
- C** Circuit: Zone
- D** Domestic hot water: Domestic hot water
- E** External: External options
- G** Gas fired: Gas-fired heat engine
- P** Producer: Central heating

Category D codes are appliance controlled only. When the domestic hot water is controlled by an SCB, it is handled like a circuit, with C-category codes.

Fig.22 Second letter

**CP010**  
AD-3001376-01

The second letter is the type.

- P** Parameter: Parameters
- C** Counter: Counters
- M** Measurement: Signals

Fig.23 Number

**CP010**  
AD-3001377-01


The number is always three digits. In certain cases, the last of the three digits relates to a zone.

### 6.2 Searching the parameters, counters and signals

You can search and change data points (Parameters, counters, signals) of the appliance, connected control boards and sensors.

▶▶ ≡ > Installation Setup > Search datapoints

Fig.24 Search

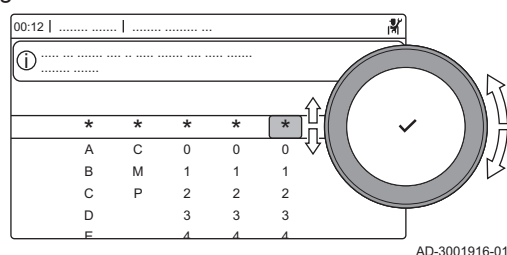


AD-3001916-01

- 💡 Use the rotary knob to navigate.
- Use the ✓ button to confirm your selection.

1. Press the ≡ button.
2. Select **Installation Setup**.
3. Select **Search datapoints**.
4. Select the search criteria (code):
  - 4.1. Select the first letter (datapoint category).
  - 4.2. Select the second letter (datapoint type).
  - 4.3. Select the first number.
  - 4.4. Select the second number.
  - 4.5. Select the third number.

- 💡 The \* symbol can be used to indicate any character within the search field.

Fig.25 List of datapoints

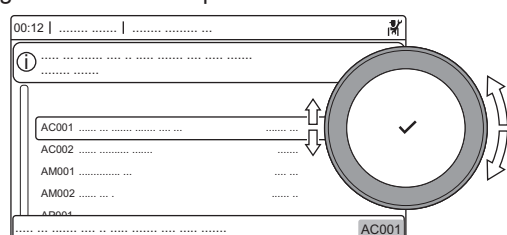

AD-3001917-01

- ⇒ The list of datapoints appears in the display. Only the first 30 results are shown when searching.
- 5. Select the desired datapoint.

## 6.3 List of parameters

### 6.3.1 CU-GH06c control unit parameters

All tables show the factory setting for the parameters.



#### Important

The tables also list parameters that are only applicable if the boiler is combined with other equipment.

Tab.15 Navigation for basic installer level

Level	Menu path
Basic installer	≡ > Installation Setup > FSB-WHB-HE-150-300 > Submenu <sup>(1)</sup> > Parameters, counters, signals > Parameters > General
(1) See the column "Submenu" in the following table for the correct navigation. The parameters are grouped in specific functionalities.	

Tab.16 Factory settings at basic installer level

Code	Display text	Description	Adjustment range	Submenu	135	160
AP016	CH function on	Enable central heating heat demand processing	0 = Off 1 = On	Commercial boiler	1	1
AP017	DHW function on	Enable domestic hot water heat demand processing	0 = Off 1 = On	Commercial boiler	1	1
AP081	Device short name	Shortname of the device		System Functionality	CU6	CU6
CP080 CP081 CP082 CP083 CP084 CP085	User T.Room Activity	Room setpoint temperature of the user zone activity	5 - 30 °C	CH	16 20 6 21 22 20	16 20 6 21 22 20
CP200	Manu ZoneRoomTempSet	Manually setting the room temperature setpoint of the zone	5 - 30 °C	CH	20	20

Code	Display text	Description	Adjustment range	Submenu	135	160
CP320	OperatingZone-Mode	Operating mode of the zone	0 = Scheduling 1 = Manual 2 = Off	CH	1	1
CP550	Zone, fire place	Fire Place mode is active	0 = Off 1 = On	CH	0	0
CP570	ZoneTimeProg Select	Time Program of the zone selected by the user	0 = Schedule 1 1 = Schedule 2 2 = Schedule 3	CH	0	0
CP660	Icon display zone	Choice icon to display this zone	0 = None 1 = All	CH	1	1

Tab.17 Navigation for installer level

Level	Menu path
Installer	≡ > Installation Setup > FSB-WHB-HE-150-300 > Submenu <sup>(1)</sup> > Parameters, counters, signals > Parameters > General
(1) See the column "Submenu" in the following table for the correct navigation. The parameters are grouped in specific functionalities.	

Tab.18 Factory settings at installer level

Code	Display text	Description	Adjustment range	Submenu	135	160
AP001	BL function	BL input function selection	1 = Full blocking 2 = Partial blocking 3 = User reset locking	Commercial boiler	1	1
AP006	Min. water pressure	Appliance will report low water pressure below this value	0 - 7 bar	Commercial boiler	0.7	0.7
AP008	Release wait time	Waiting time after closing the release contact to start the heat generator.	0 - 255 Sec	Commercial boiler	0	0
AP009	Service hours	Number of heat generator operating hours for raising a service notification	24 - 51000 Hours	Commercial boiler	17400	17400
AP010	Service notification	Select the type of service notification	0 = None 1 = Custom notification 2 = ABC notification	Commercial boiler	2	2
AP011	Service hours mains	Hours powered to raise a service notification	24 - 51000 Hours	Commercial boiler	17400	17400
AP073	Summer Winter	Outdoor temperature: upper limit for heating	1.5 - 60 °C	Outdoor temperature	22	22
AP074	Force summer mode	The heating is stopped. Hot water is maintained. Force Summer Mode	0 = Off 1 = On	Outdoor temperature	0	0
AP079	Building Inertia	Inertia of the building used for heat up speed	0 - 255	Outdoor temperature	0	0
AP080	Frost min out temp	Outside temperature below which the antifreeze protection is activated	-32 - 32 °C	Outdoor temperature	0	0
AP102	Boiler Pump function	Configuration of the boiler pump as zone pump or system pump (feed lowloss header)	0 = No 1 = Yes	Commercial boiler	0	0
AP110	2nd return sensor	Parameter to activate the 2nd return sensor	0 = Inactive 1 = Active	Commercial boiler	0	0
CP000	MaxZoneT-FlowSetpoint	Maximum Flow Temperature setpoint zone	0 - 90 °C	CH	90	90
CP010	Tflow setpoint zone	Zone flow temperature setpoint, used when the zone is set to a fixed flow setpoint.	0 - 90 °C	CH	90	90

Code	Display text	Description	Adjustment range	Submenu	135	160
CP020	Zone Function	Functionality of the zone	0 = Disable 1 = Direct	CH	1	1
CP060	RoomT. Holiday	Wished room zone temperature on holiday period	5 - 20 °C	CH	6	6
CP070	MaxReduce-dRoomT.Lim	Max Room Temperature limit of the circuit in reduced mode, that allows switching to comfort mode	5 - 30 °C	CH	15	15
CP210	Zone HCZP Comfort	Comfort footpoint of the temperature of heat curve of the circuit	15 - 90 °C	CH	15	15
CP220	Zone HCZP Reduced	Reduced footpoint of the temperature of heat curve of the circuit	15 - 90 °C	CH	15	15
CP230	Zone Heating Curve	Heating curve temperature gradient of the zone	0 - 4	CH	2.5	2.5
CP340	TypeReduced-NightMode	Type of reduced night mode, stop or maintain heating of circuit	0 = Stop heat demand 1 = Continue heat demand	CH	0	0
CP470	Zone screed drying	Setting of the screed drying program of the zone	0 - 30 Days	CH	0	0
CP480	ScreedStart-Temp	Setting of the start temperature of the screed drying program of the zone	20 - 50 °C	CH	20	20
CP490	ScreedStop-Temp	Setting of the stop temperature of the screed drying program of the zone	20 - 50 °C	CH	20	20
CP750	MaxZone Pre-heat time	Maximum zone preheat time	0 - 65000 Min	CH	0	0
CP780	Control strategy	Selection of the control strategy for the zone	0 = Automatic 1 = Room Temp. based 2 = Outdoor Temp. based 3 = Outdoor & room based	CH	1	1
DP003	Abs. max fan DHW	Maximum fan speed on Domestic Hot Water	1000 - 8500 Rpm	Commercial boiler	5700	6700
DP010	Hysteresis DHW	Temperature hysteresis for the heat generator to start on domestic hot water production	0 - 60 °C	Commercial boiler	7	7
DP011	Stop offset DHW	Temperature offset to stop heat generator on domestic hot water production	0 - 60 °C	Commercial boiler	5	5
EP014	SCB func. 10V PWMIn	Smart Control Board function 10 Volt PWM input	0 = Off 1 = Temperature control 2 = Power control	0-10 volt input	0	0
GP007	Fan RPM Max CH	Maximum fan speed during Central Heating mode	1000 - 8500 Rpm	Commercial boiler	5700	6700
GP008	Fan RPM Min	Minimum fan speed during Central Heating + Domestic Hot Water mode	900 - 8500 Rpm	Commercial boiler GVC Pneumatic	1900	1900
GP009	Fan RPM Start	Fan speed at appliance start	900 - 5000 Rpm	Commercial boiler GVC Pneumatic	2200	2200
GP010	GPS Check	Gas Pressure Switch check on/off	0 = No 1 = Yes	Commercial boiler	0	0
GP021	Temp diff Modulating	Modulate back when delta temperature is larger than this threshold	5 - 25 or 40 °C	Commercial boiler	40	25
GP022	Tfa Filter Tau	Tau factor for average flow temperature calculation	0 - 255	Commercial boiler	1	1

Code	Display text	Description	Adjustment range	Submenu	135	160
GP024	VPS Check	Valve Proofing System check on / off	0 = No 1 = Yes	Commercial boiler GVC Pneumatic	0	0
PP007	Min anti-cycle time	Minimum heat generator holding time that can be reached after a stop	0 - 20 Min	Commercial boiler	3	3
PP012	Stabilization time	Stabilization time after heat generator start for central heating	5 - 180 Sec	Commercial boiler	30	30
PP015	CH Pump post-run time	Central heating pump post run time	1 - 99 Min	Commercial boiler	1	1
PP016	Max. CH pump speed	Maximum central heating pump speed (%)	20 - 100 %	Commercial boiler	100	100
PP018	Min CH pump speed	Minimum central heating pump speed (%)	20 - 100 %	Commercial boiler	20	20
PP023	CH Hysteresis	Temperature hysteresis for the generator to start on central heating	1 - 25 °C	Commercial boiler	10	10

Tab.19 Navigation for advanced installer level

Level	Menu path
Advanced installer	≡ > Installation Setup > FSB-WHB-HE-150-300 > Submenu <sup>(1)</sup> > Parameters, counters, signals > Parameters > Advanced
(1) See the column "Submenu" in the following table for the correct navigation. The parameters are grouped in specific functionalities.	

Tab.20 Factory settings at advanced installer level

Code	Display text	Description	Adjustment range	Submenu	135	160
AP002	Manual Heat Demand	Enable manual heat demand function	0 = Off 1 = With setpoint 2 = TOutdoor Control	Commercial boiler	0	0
AP026	Setpoint manual HD	Flow temperature setpoint for manual heat demand	7 - 90 °C	Commercial boiler	40	40
AP056	Outdoor sensor	Enable outdoor sensor	0 = No outside sensor 1 = AF60	Outdoor temperature	1	1
AP089	Installer name	Name of the installer		Mandatory bus master		
AP090	Installer phone	Telephone number of the installer		Mandatory bus master	6	6
CP040	Postrun zone pump	Pump post runtime of the zone	0 - 20 Min	CH	0	0
CP240	ZoneRoomUnitInfl	Adjustment of the influence of the zone room unit	0 - 10	CH	3	3
CP250	CalSondeAmb-Zone	Calibration of Zone Room Unit	-5 - 5 °C	CH	0	0
CP290	ConfigZone-PumpOut	Configuration of Zone Pump Output	0 = Zone output 1 = CH mode 2 = DHW mode 3 = Cooling mode 4 = Error report 5 = Burning 6 = Service flag 7 = System error 8 = DHW looping	CH	0	0
CP510	Temporary Room Setp	Temporary room setpoint per zone	5 - 50 °C	CH	20	20

Code	Display text	Description	Adjustment range	Submenu	135	160
GP030	Flue Gas Temp Max	Maximum flue gas temperature	20 - 200 °C	Commercial boiler	120	120
GP048	Fan PWM Min	Minimum Pulse Width Modulation for the fan controller	0 - 100 %	GVC Pneumatic	10	10
GP050	Power Min	Minimum power in kilo Watt for RT2012 calculation	0 - 300 kW	Commercial boiler	5.3	5.3
GP056	Grad. 1 power reduct	Factor of power reduction when temperature gradient > parHeDTh-MaxLevel1 is detected	0 - 1000	Commercial boiler	1	1
PP017	ChPumpSpeed-MaxFactor	Maximum central heating at minimum load as percentage of max pump speed	0 - 100 %	Commercial boiler	30	30

### 6.3.2 SCB-01 expansion PCB parameters

All tables show the factory setting for the parameters.



#### Important

The tables also list parameters that are only applicable if the boiler is combined with other equipment.

Tab.21 Navigation for installer level

Level	Menu path
Installer	≡ > Installation Setup > SCB-01 > Submenu <sup>(1)</sup> > Parameters, counters, signals > Parameters > General
(1) See the column "Submenu" in the following table for the correct navigation. The parameters are grouped in specific functionalities.	

Tab.22 Factory settings at installer level

Code	Display text	Description	Adjustment range	Submenu	Default setting
EP018	Status relay func.	Status relay function	0 = No Action 1 = Alarm 2 = Alarm Inverted 3 = Generator on 4 = Generator off 5 = Reserved 6 = Reserved 7 = Service request 8 = Generator on CH 9 = Generator on DHW 10 = CH pump on 11 = Locking or Blocking 12 = Cooling mode	Status information	No Action
EP019	Status relay func.	Status relay function	0 = No Action 1 = Alarm 2 = Alarm Inverted 3 = Generator on 4 = Generator off 5 = Reserved 6 = Reserved 7 = Service request 8 = Generator on CH 9 = Generator on DHW 10 = CH pump on 11 = Locking or Blocking 12 = Cooling mode	Status information	No Action

Code	Display text	Description	Adjustment range	Submenu	Default setting
EP028	Function 10V-PWM	Selects the function of the 0-10 Volt output	0 = 0-10V 1 (Wilo) 1 = 0-10V 2 (Gr. GENI) 2 = PWM signal (Solar) 3 = 0-10V 1 limited 4 = 0-10V 2 limited 5 = PWM signal limited 6 = PWM signal (UPMXL)	0-10 volt or PWM out	0-10V 1 (Wilo)
EP029	Source 10V-PWM	Selects the source signal for the 0-10 Volt output	0 = PWM 1 = Requested power 2 = Actual power	0-10 volt or PWM out	PWM

## 6.4 List of measured values

### 6.4.1 CU-GH06c control unit counters

Tab.23 Navigation for basic installer level

Level	Menu path
Basic installer	≡ > Installation Setup > FSB-WHB-HE-150-300 > Submenu <sup>(1)</sup> > Parameters, counters, signals > Counters > General
(1) See the column "Submenu" in the following table for the correct navigation. The counters are grouped in specific functionalities.	

Tab.24 Counters at basic installer level

Code	Display text	Description	Range	Submenu
AC001	Hours on mains	Number of hours that the appliance has been on mains power	0 - 65534Hours	System Functionality
AC002	Service run hours	Number of hours that the appliance has been producing energy since last service	0 - 131070Hours	Commercial boiler
AC003	Hours since service	Number of hours since the previous servicing of the appliance	0 - 131070Hours	Commercial boiler
AC004	Starts since service	Number of heat generator starts since the previous servicing.	0 - 4294967295	Commercial boiler
AC005	CH Energy Consumed	Energy consumed for central heating	0 - 4294967295kWh	Commercial boiler
AC006	DHW energy consumed	Energy consumed for domestic hot water	0 - 4294967295kWh	Commercial boiler
AC007	Cool Energy consumed	Energy consumed for cooling	0 - 4294967295kWh	Commercial boiler
AC026	Pump running hours	Counter that shows the number of pump running hours	0 - 4294967295Hours	Commercial boiler
AC027	Pump starts	Counter that shows the number of pump starts	0 - 4294967295	Commercial boiler
DC002	DHW valve cycles	Numbers of Domestic Hot Water diverting valve cycles	0 - 4294967295	Commercial boiler
DC003	Hrs DHW 3wv	Number of hours during which the diverting valve is in DHW position	0 - 4294967295Hours	Commercial boiler
DC004	DHW starts	Number of starts for domestic hot water	0 - 4294967295	Commercial boiler
DC005	DHW run hours	Total number of hours that the appliance has been producing energy for domestic hot water	0 - 4294967295Hours	Commercial boiler
PC003	Heat gen run hrs	Total Number of hours that the appliance has been producing energy for central heating and DHW	0 - 65534Hours	Commercial boiler

Tab.25 Navigation for installer level

Level	Menu path
Installer	☰ > Installation Setup > FSB-WHB-HE-150-300 > Submenu <sup>(1)</sup> > Parameters, counters, signals > Counters > General
(1) See the column "Submenu" in the following table for the correct navigation. The counters are grouped in specific functionalities.	

Tab.26 Counters at installer level

Code	Display text	Description	Range	Submenu
DC001	DhwTotalPower Cons	Total power consumption used by Domestic Hot Water	0 - 4294967295kW	Commercial boiler
PC002	Total starts	Total number of heat generator starts. For heating and domestic hot water	0 - 65534	Commercial boiler
PC004	Burner flame loss	Number of burner flame loss	0 - 65534	Commercial boiler

Tab.27 Navigation for advanced installer level

Level	Menu path
Advanced installer	☰ > Installation Setup > FSB-WHB-HE-150-300 > Submenu <sup>(1)</sup> > Parameters, counters, signals > Counters > Advanced
(1) See the column "Submenu" in the following table for the correct navigation. The counters are grouped in specific functionalities.	

Tab.28 Counters at advanced installer level

Code	Display text	Description	Range	Submenu
PC001	ChCtrTotalPower-Cons.	Total power consumption used by Central Heating	0 - 4294967295kW	Commercial boiler

## 6.4.2 SCB-01 expansion PCB counters

Tab.29 Navigation for basic installer level

Level	Menu path
Basic installer	☰ > Installation Setup > SCB-01 > Submenu <sup>(1)</sup> > Parameters, counters, signals > Counters > General
(1) See the column "Submenu" in the following table for the correct navigation. The counters are grouped in specific functionalities.	

Tab.30 Counters at basic installer level



Code	Display text	Description	Range	Submenu
AC001	Hours on mains	Number of hours that the appliance has been on mains power	0 - 4294967295Hours	System Functionality

## 6.4.3 CU-GH06c control unit signals

Tab.31 Navigation for basic installer level

Level	Menu path
Basic installer	☰ > Installation Setup > FSB-WHB-HE-150-300 > Submenu <sup>(1)</sup> > Parameters, counters, signals > Signals > General
(1) See the column "Submenu" in the following table for the correct navigation. The signals are grouped in specific functionalities.	

Tab.32 Signals at basic installer level

Code	Display text	Description	Range	Submenu
AM001	DHW active	Is the appliance currently in domestic hot water production mode?	0 = Off 1 = On	Commercial boiler
AM010	Pump speed	The current pump speed	0 - 100%	Commercial boiler
AM012	Status Appliance	Current main status of the appliance.	 <b>See</b> Status and sub-status, page 31	Status information System Functionality
AM014	Sub status Appliance	Current sub status of the appliance.	 <b>See</b> Status and sub-status, page 31	Status information System Functionality
AM015	Pump running?	Is the pump running?	0 = Inactive 1 = Active	Commercial boiler
AM016	System Flow Temp	Flow temperature of appliance.	-25 - 150°C	Zone manager Producer Generic Commercial boiler Prod. manager bridge
AM017	T heat exchanger	The temperature of heat exchanger	-25 - 150°C	Commercial boiler
AM018	T return	Return temperature of appliance. The temperature of the water entering the appliance.	-25 - 150°C	Zone manager Commercial boiler
AM019	Water pressure	Water pressure of the primary circuit.	0 - 25.5bar	Commercial boiler
AM022	On / Off heat demand	On / Off heat demand	0 = Off 1 = On	Commercial boiler
AM024	Actual rel. Power	Actual relative power of the appliance	0 - 655.35%	Commercial boiler
AM027	Outside temperature	Instantaneous outside temperature	-60 - 60°C	Outdoor temperature Commercial boiler
AM028	0to10Vinput	Value of the 0 to 10 Volt input. Meaning is dependant on the current input function setting.	0 - 25V	0-10 volt input
AM037	3 way valve	Status of the three way valve	0 = CH 1 = DHW	Commercial boiler
AM040	Control temperature	Temperature used for hot water control algorithms.	-25 - 150°C	Commercial boiler
AM101	Internal setpoint	Internal system flow temperature setpoint	0 - 120°C	Commercial boiler
AP078	Out sensor detected	Outside sensor detected in the application	0 = No 1 = Yes	Outdoor temperature
GM001	Actual fan RPM	Actual fan RPM	0 - 8500Rpm	Commercial boiler
GM002	Fan RPM setpoint	Actual fan RPM setpoint	0 - 8500Rpm	Commercial boiler
GM006	GPS status	Gas Pressure Switch status	0 = Open 1 = Closed 2 = Off	Commercial boiler
GM008	Actual flame current	Actual flame current measured	0 - 25µA	Commercial boiler

Code	Display text	Description	Range	Submenu
GM012	Release Input	Release signal for the CU	0 = No 1 = Yes	Commercial boiler
GM015	Vps Switch	Valve Proving System switch open / closed	0 = Open 1 = Closed 2 = Off	Commercial boiler

Tab.33 Navigation for installer level

Level	Menu path
Installer	≡ > Installation Setup > FSB-WHB-HE-150-300 > Submenu <sup>(1)</sup> > Parameters, counters, signals > Signals > General
(1) See the column "Submenu" in the following table for the correct navigation. The signals are grouped in specific functionalities.	

Tab.34 Signals at installer level

Code	Display text	Description	Range	Submenu
AM011	Service required?	Is service currently required?	0 = No 1 = Yes	Commercial boiler
AM033	Next Service Ind.	Next service indication	0 = None 1 = A 2 = B 3 = C 4 = Custom	Commercial boiler
AM036	Flue gas temperature	Temperature of the exhaust gas leaving the appliance	0 - 250°C	Commercial boiler
AM044	Nr sensors supported	Number of sensors supported by the device	0 - 255	Commercial boiler
AM045	Water P available	Water pressure sensor present?	0 = No 1 = Yes	Commercial boiler
AM091	SeasonMode	Seasonal mode active (summer / winter)	0 = Winter 1 = Frost protection 2 = Summer neutral band 3 = Summer	Outdoor temperature
CM030	Zone RoomTemperature	Measure of the room temperature of the zone	-60 - 60°C	CH
CM120	ZoneCurrentMode	Zone Current Mode	0 = Scheduling 1 = Manual 2 = Off 3 = Temporary	CH
CM130	ZoneCurrent activity	Current activity of the zone	0 = Off 1 = Reduced 2 = Comfort 3 = Anti legionella	CH
CM140	ZoneOTContr present	OpenTherm controller is connected to the zone	0 = No 1 = Yes	CH
CM150	ZoneState Heatdemand	State of On Off heat demand per zone	0 = No 1 = Yes	CH
CM160	Zone Mod HeatDemand	Presense of modulating heat demand per zone	0 = No 1 = Yes	CH
CM170	Zone OTSmartPower	Zone OpenTherm smart power function is available	0 = No 1 = Yes	CH
CM180	Zone RU present	Presense of Room Unit in this zone	0 = No 1 = Yes	CH
CM190	Zone Troom setpoint	Wished room temperature setpoint of the zone	-60 - 60°C	CH
CM200	ZoneCurrentHeatMode	Displaying current operating mode of the zone	0 = Standby 1 = Heating 2 = Cooling	CH

Code	Display text	Description	Range	Submenu
CM210	ZoneTout temp	Current outdoor temperature of the zone	-60 - 60°C	CH
CM230	ZoneTout aver long	Outdoor temperature average long time per zone	-60 - 60°C	CH
CM260	Zone T Room Sensor	Measurement of the room sensor temperature of the zone	-60 - 60°C	CH
GM004	Gas valve 1	Gas valve 1	0 = Open 1 = Closed 2 = Off	Commercial boiler
GM005	Gas valve 2	Gas valve 2	0 = Open 1 = Closed 2 = Off	Commercial boiler
GM010	Power available	Available power in % of maximum	0 - 100%	Commercial boiler
GM044	ControlledStopReason	Possible reason for Controlled Stop	0 = None 1 = CH Blocking 2 = DHW Blocking 3 = Wait for burner 4 = TFlow > absolute max 5 = TFlow > start temp. 6 = Theat exch. > Tstart 7 = Avg Tflow > Tstart 8 = TFlow > max setpoint 9 = T difference too big 10 = TFlow > stop temp. 11 = Anti cycle on off HD 12 = Poor combustion 13 = Solar T above stop T	Commercial boiler
NM001	CascSystemTF	Cascade system flow temperature	-60 - 125°C	Producer<>Consumer
PM002	CH Setpoint	Central heating setpoint of the appliance	0 - 125°C	Commercial boiler

Tab.35 Navigation for advanced installer level

Level	Menu path
Advanced installer	≡ > Installation Setup > FSB-WHB-HE-150-300 > Submenu <sup>(1)</sup> > Parameters, counters, signals > Signals > Advanced
(1) See the column "Submenu" in the following table for the correct navigation. The signals are grouped in specific functionalities.	

Tab.36 Signals at advanced installer level

Code	Display text	Description	Range	Submenu
AM043	Pwr dwn reset needed	A power down reset is needed	0 = No 1 = Yes	Commercial boiler
CM070	Zone Tflow Setpoint	Current Flow temperature setpoint of zone	0 - 100°C	CH
GM003	Flame detection	Flame detection	0 = Off 1 = On	Commercial boiler
GM007	Ignite	Appliance is igniting	0 = Off 1 = On	Commercial boiler
GM011	Power setpoint	Power setpoint in % of maximum	0 - 100%	Commercial boiler
GM013	Blocking Input	Blocking input status	0 = Open 1 = Closed 2 = Off	Commercial boiler



Code	Display text	Description	Range	Submenu
GM025	STB status	High limit status (0 = open, 1 = closed)	0 = Open 1 = Closed 2 = Off	Commercial boiler
PM003	ChTflowAverage	Actual average flow temperature	-25 - 125°C	Commercial boiler

#### 6.4.4 SCB-01 expansion PCB signals

Tab.37 Navigation for basic installer level

Level	Menu path
Basic installer	≡ > Installation Setup > SCB-01 > Submenu <sup>(1)</sup> > Parameters, counters, signals > Signals > General
(1) See the column "Submenu" in the following table for the correct navigation. The signals are grouped in specific functionalities.	

Tab.38 Signals at basic installer level

Code	Display text	Description	Range	Submenu
AM010	Pump speed	The current pump speed	0 - 100%	0-10 volt or PWM out
AM012	Status Appliance	Current main status of the appliance.	 See Status and sub-status, page 31	System Functionality
AM014	Sub status Appliance	Current sub status of the appliance.	 See Status and sub-status, page 31	System Functionality
AM015	Pump running?	Is the pump running?	0 = Inactive 1 = Active	0-10 volt or PWM out
GM011	Power setpoint	Power setpoint in % of maximum	0 - 655.35%	0-10 volt or PWM out

Tab.39 Navigation for installer level

Level	Menu path
Installer	≡ > Installation Setup > SCB-01 > Submenu <sup>(1)</sup> > Parameters, counters, signals > Signals > General
(1) See the column "Submenu" in the following table for the correct navigation. The signals are grouped in specific functionalities.	

Tab.40 Signals at installer level

Code	Display text	Description	Range	Submenu
AM200	Status contact 1	Status of status contact 1. The meaning is dependant on the current function setting.	0 = Off 1 = On	Status information
AM201	Status contact 1	Status of status contact 1. The meaning is dependant on the current function setting.	0 = Off 1 = On	Status information

#### 6.4.5 Status and sub-status

Tab.41 AM012 - Status

Code	Display text	Explanation
0	Standby	The appliance is in standby mode.
1	Heat Demand	A heat demand is active.
2	Generator start	The appliance starts.
3	Generator CH	The appliance is active for central heating.

Code	Display text	Explanation
4	Generator DHW	The appliance is active for domestic hot water.
5	Generator stop	The appliance has stopped.
6	Pump Post Run	The pump is active after the appliance stopped.
7	Cooling Active	The appliance is active for cooling.
8	Controlled Stop	The appliance does not start because the starting conditions are not met.
9	Blocking Mode	A blocking mode is active.
10	Locking Mode	A locking mode is active.
11	Load test min	Low load test mode for central heating is active.
12	Load test CH max	Full load test mode for central heating is active.
13	Load test DHW max	Full load test mode for domestic hot water is active.
15	Manual Heat Demand	Manual heat demand for central heating is active.
16	Frost Protection	Frost protection mode is active.
17	Deaeration	The deaeration program operates.
18	Control unit Cooling	The fan runs to cool the inside of the appliance.
19	Reset In Progress	The appliance resets.
20	Auto Filling	The appliance fills the installation.
21	Halted	The appliance has stopped. It must be reset manually.
200	Device Mode	The service tool interface controls the functions of the appliance.

Tab.42 AM014 - Sub status

Code	Display text	Explanation
0	Standby	The appliance waits for a process or an action.
1	AntiCycling	The appliance waits to restart, because there were too many consecutive heat demands (anti-short cycle).
2	CloseHydraulicValve	An external hydraulic valve is opened, when this option is connected to the appliance. An external option board must be connected to drive the valve.
3	ClosePump	The appliance starts the pump.
4	WaitingForStartCond.	The appliance waits for the temperature to meet the start conditions.
10	CloseExtGasValve	An external gas valve is opened, when this option is connected to the appliance. An external option board must be connected to drive the valve.
11	StartToGlueGasValve	The fan runs faster, before the flue gas valve is opened.
12	CloseFlueGasValve	The flue gas valve opens.
13	FanToPrePurge	The fan runs faster to pre-purge.
14	WaitForReleaseSignal	The appliance waits for the release input to close.
15	BurnerOnCommandToSu	A burner start command is sent to the safety core.
16	VpsTest	Valve proving test is active.
17	PreIgnition	Ignition starts before the gas valve opens.
18	Ignition	Ignition is active.
19	FlameCheck	The flame detection is active after the ignition.
20	Interpurge	The fan runs to purge the heat exchanger after a failed ignition.
30	Normal Int.Setpoint	The appliance operates to reach the desired value.
31	Limited Int.Setpoint	The appliance operates to reach the reduced internal desired value.
32	NormalPowerControl	The appliance operates on the desired power level.
33	GradLevel1PowerCtrl	The modulation is stopped due to a faster heat exchanger temperature change than gradient level 1.
34	GradLevel2PowerCtrl	The modulation is set to low load due to a faster heat exchanger temperature change than gradient level 2.
35	GradLevel3PowerCtrl	The appliance is in blocking mode due to a faster heat exchanger temperature change than gradient level 3.
36	ProtectFlamePwrCtrl	The burner power is increased due to a low ionisation signal.
37	StabilizationTime	The appliance is in stabilisation time. Temperatures should stabilise and temperature protections are switched off.
38	ColdStart	The appliance runs at start load to prevent cold start noise.

Code	Display text	Explanation
39	ChResume	The appliance resumes central heating after a domestic hot water interruption.
40	SuRemoveBurner	Burner demand is removed from safety core.
41	FanToPostPurge	The fan runs to purge the heat exchanger after the appliance stopped.
42	OpenExtFlueGasValve	External gas valve closes.
43	StopFanToFlueGVRpm	The fan runs slower, before the flue gas valve is closed.
44	StopFan	The fan has stopped.
45	LimitedPwrOnTflueGas	The power of the appliance is decreased to lower the flue gas temperature.
60	PumpPostRunning	The pump is active after the appliance stopped in order to bring the remaining heat into the system.
61	OpenPump	The pump has stopped.
62	OpenHydraulicValve	The external hydraulic valve closes.
63	SetAntiCycleTimer	
200	Initialising Done	Initialisation is finished.
201	Initialising Csu	The CSU is initialising.
202	Init. Identifiers	The identifiers are initialising.
203	Init.BL.Parameter	The blocking parameters are initialising.
204	Init. Safety Unit	The safety unit is initialising.
205	Init. Blocking	The blocking is initialising.

## 7 Maintenance

### 7.1 Maintenance regulations



#### Important

The boiler must be maintained by a qualified installer in accordance with local and national regulations.



#### Important

Adjust the frequency of inspection and service to the conditions of use. This applies especially if the boiler is:

- In constant use (for specific processes).
- Used with a low supply temperature.
- Used with a high  $\Delta T$ .



#### Caution

- Replace defective or worn parts with original spare parts.
- During inspection and maintenance work, always replace all gaskets on the parts removed.
- Check whether all gaskets have been positioned properly (absolutely flat in the appropriate groove means they are gas, air and water tight).
- During the inspection and maintenance work, water (drops, splashes) must never come into contact with the electrical parts.



#### Warning

Always wear safety goggles and a dust mask during cleaning work (involving compressed air).



#### Danger of electric shock

Ensure that the boiler is switched off.

## 7.2 Maintenance message

---

The boiler display will clearly indicate that a service is required at the appropriate time. Use the automatic maintenance message for preventive maintenance, to keep faults to a minimum. The service messages show which service kit must be used. These service kits contain all parts and gaskets that are required for the relevant service. These service kits (A, B or C) put together by BAXI are available from spare parts suppliers.



### Important

Maintenance messages must be followed up within 2 months.



### Caution

Reset the maintenance message following every service.

## 7.3 Standard inspection and maintenance operations

---

For a service, always perform the following standard inspection and maintenance operations.

### 7.3.1 Checking the water pressure

---

1. Check the water pressure.



### Important

The water pressure is shown on the display of the control panel.

⇒ The water pressure must be at least 0.8 bar

2. If the water pressure is lower than 0.8 bar, top up the central heating system.

### 7.3.2 Checking the water quality

---

1. Fill a clean bottle with some water from the system/boiler from the filling and drain cock.
2. Check the quality of this water sample or have it checked.



### See

More information is available in our **Water quality instructions**. This manual forms part of the set of documents supplied with the boiler. Always adhere to the instructions in the aforementioned document.


### 7.3.3 Checking the ionisation current

---

1. Check the ionisation current at full load and at low load.  
⇒ The value is stable after 1 minute.
2. Clean or replace the ionisation/ignition electrode if the value is lower than 4 µA.

### 7.3.4 Checking the flue gas discharge/air supply connections

Fig.26 Checking flue gas discharge/air supply connections

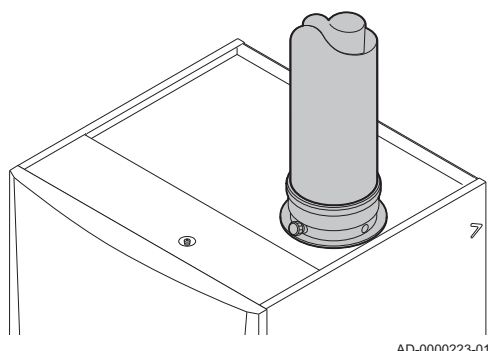


AD-0000223-01

1. Check the flue gas discharge and air supply connections for condition and tightness.

### 7.3.5 Checking the combustion

Fig.27 Flue gas measuring point

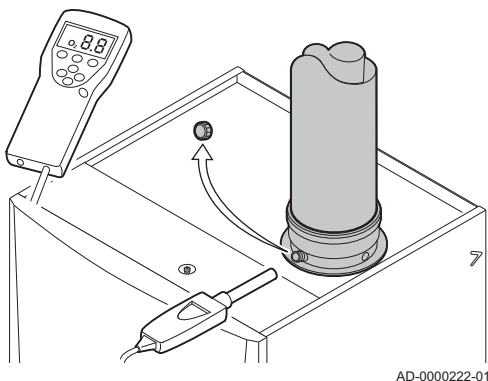

AD-0000222-01

Combustion is checked by measuring the O<sub>2</sub> percentage in the flue gas outlet duct.

1. Unscrew the cap from the flue gas measuring point.
2. Insert the probe for the flue gas analyser into the measurement opening.



**Warning**

During measurement, seal the opening around the sensor fully.



**Important**

The flue gas analyser must have a minimum accuracy of  $\pm 0.25\%$  O<sub>2</sub>.



**Important**

The flue gas analyser must meet the requirements of BS 7927 or BS-EN 503793 and be calibrated according to the manufacturer's requirements.

3. Measure the percentage of O<sub>2</sub> in the flue gases. Take measurements at full load and at part load.



**Important**

Measurements must be taken with the front casing off.




**Important**

- This appliance is suitable for category I<sub>2H</sub> containing up to 20% Hydrogen gas (H<sub>2</sub>). Due to variations in the H<sub>2</sub> percentage, the O<sub>2</sub> percentage can vary over time. (For example: a percentage of 20% H<sub>2</sub> in the gas can lead to an increase of 1,5% of O<sub>2</sub> in the flue gasses)
- A significant adjustment of the gas valve may be needed. Adjustment can be done using the standard O<sub>2</sub> values of the gas used.

#### ■ Performing the full load test


1. Select the tile [🔧].  
⇒ The **Change load test mode** menu appears.

Fig.28 Full load test

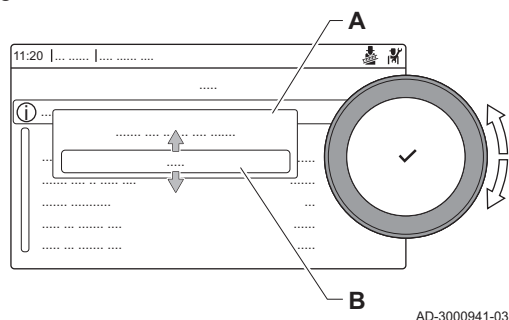

2. Select the test **Medium power**.

- A** Change load test mode  
**B** Medium power

⇒ The full load test starts. The selected load test mode is shown in the menu and the icon  appears in the top right of the screen.

3. Check the load test settings and adjust if necessary.

⇒ Only the parameters shown in bold can be changed.

### ■ Checking/setting values for O<sub>2</sub> at full load

1. Measure the percentage of O<sub>2</sub> in the flue gases at full load.
2. Compare the measured value with the checking values in the table.

Tab.43 Checking/setting values for O<sub>2</sub> at full load for G20 (H gas)

Values at full load for G20 (H gas)	O <sub>2</sub> (%) <sup>(1)</sup>
Quinta Ace 135	4.8 - 5.2 <sup>(1)</sup>
Quinta Ace 160	4.8 - 5.2 <sup>(1)</sup>
(1) Nominal value	

Tab.44 Checking/setting values for O<sub>2</sub> at full load for BREEAM with G20 (H gas)

Values at full load for G20 (H gas) BREEAM	O <sub>2</sub> (%) <sup>(1)(2)</sup>
Quinta Ace 135	5.5 - 5.9 <sup>(1)</sup>
Quinta Ace 160	6.1 - 6.5 <sup>(1)</sup>
(1) Nominal value (2) These values are only applicable when the fan speeds have been set for BREEAM.	

Tab.45 Checking/setting values for O<sub>2</sub> at full load for G30/G31 (butane/propane)

Values at full load for G30/G31 (butane/propane)	O <sub>2</sub> (%) <sup>(1)</sup>
Quinta Ace 135	5.1 - 5.4 <sup>(1)</sup>
Quinta Ace 160	5.1 - 5.4 <sup>(1)</sup>
(1) Nominal value	

Tab.46 Checking/setting values for O<sub>2</sub> at full load for G30/G31 (butane/propane)(Great Britain)

Values at full load for G30/G31 (butane/propane)	O <sub>2</sub> (%) <sup>(1)</sup>
Quinta Ace 135	5.1 - 5.4 <sup>(1)</sup>
Quinta Ace 160	5.1 - 5.4 <sup>(1)</sup>
(1) Nominal value	

Tab.47 Checking/setting values for O<sub>2</sub> at full load for BREEAM with G30/G31 (butane/propane)(Great Britain)

Values at full load for G30/G31 (butane/propane) BREEAM	O <sub>2</sub> (%) <sup>(1)(2)</sup>
Quinta Ace 135	6.6 - 6.9 <sup>(1)</sup>
Quinta Ace 160	6.6 - 6.9 <sup>(1)</sup>
(1) Nominal value (2) These values are only applicable when the fan speeds have been set for BREEAM.	



### Caution

The O<sub>2</sub> values at full load must be lower than the O<sub>2</sub> values at low load.

3. If the measured value is outside of the values given in the table, correct the gas/air ratio.
4. Use adjusting screw **A** to set the percentage of O<sub>2</sub> to the nominal value, for the gas type being used. This must always be between the highest and lowest setting limit.
5. Check the flame through the inspection glass. The flame must not blow off.
6. Measure the CO value in the flue gasses. If the CO level is above 400 ppm perform the following actions:



### Important

The CO-concentration in the flue gasses must always comply with the installation regulations of the country in which the boiler is installed.

- 6.1. Check if the flue gas discharge system is installed correctly.
- 6.2. Check if the used gas type matches with the boiler settings.
- 6.3. Check the burner for damage and clean the burner.
- 6.4. Recheck the gas/air ratio setting.
- 6.5. Contact your supplier if the CO level is still above 400 ppm.



### Danger

If the CO level is above 1000 ppm, switch off the boiler and contact your supplier.

Fig.29 Location of adjusting screw A


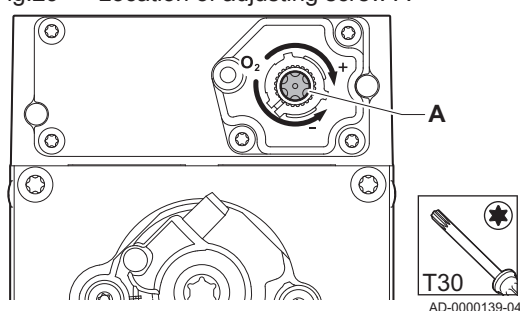


Fig.30 Low load test

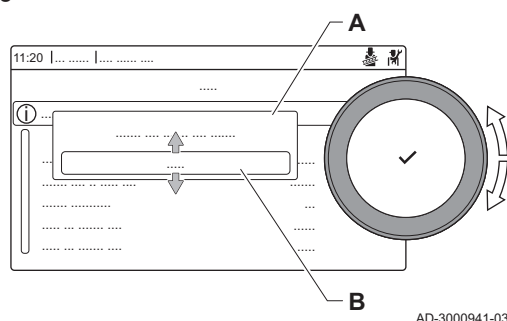

## ■ Performing the low load test

1. If the full load test is still running, press the ✓ button to change the load test mode.
2. If the full load test was finished, select the tile [👤] to restart the chimney sweep menu.

### A Change load test mode

### B Low power

3. Select the **Low power** test in the menu **Change load test mode**.  
⇒ The low load test starts. The selected load test mode is shown in the menu and the icon 👤 appears in the top right of the screen.
4. Check the load test settings and adjust if necessary.  
⇒ Only the parameters shown in bold can be changed.
5. End the low load test by pressing the ⏸ button.  
⇒ The message **Running load test(s) stopped!** is displayed.

## ■ Checking/setting values for O<sub>2</sub> at part load

1. Measure the percentage of O<sub>2</sub> in the flue gases at part load.
2. Compare the measured value with the checking values in the table.

Tab.48 Checking/setting values for O<sub>2</sub> at part load for G20 (H gas)

Values at part load for G20 (H gas)	O <sub>2</sub> (%) <sup>(1)</sup>
Quinta Ace 135	5.2 <sup>(1)</sup> - 5.6
Quinta Ace 160	5.2 <sup>(1)</sup> - 5.6
(1) Nominal value	

Tab.49 Checking/setting values for O<sub>2</sub> at part load for BREEAM with G20 (H gas)

Values at part load for G20 (H gas) BREEAM	O <sub>2</sub> (%) <sup>(1)(2)</sup>
Quinta Ace 135	5.9 <sup>(1)</sup> - 6.3
Quinta Ace 160	6.5 <sup>(1)</sup> - 6.9
(1) Nominal value (2) These values are only applicable when the fan speeds have been set for BREEAM.	

Tab.50 Checking/setting values for O<sub>2</sub> at part load for G30/G31 (butane/propane)

Values at part load for G30/G31 (butane/propane)	O <sub>2</sub> (%) <sup>(1)</sup>
Quinta Ace 135	5.4 <sup>(1)</sup> - 5.7
Quinta Ace 160	5.4 <sup>(1)</sup> - 5.7
(1) Nominal value	

Tab.51 Checking/setting values for O<sub>2</sub> at part load for G30/G31 (butane/propane)(Great Britain)

Values at part load for G30/G31 (butane/propane)	O <sub>2</sub> (%) <sup>(1)</sup>
Quinta Ace 135	5.4 <sup>(1)</sup> - 5.7
Quinta Ace 160	5.4 <sup>(1)</sup> - 5.7
(1) Nominal value	

Tab.52 Checking/setting values for O<sub>2</sub> at part load for BREEAM with G30/G31 (butane/propane)(Great Britain)


Values at part load for G30/G31 (butane/propane) BREEAM	O <sub>2</sub> (%) <sup>(1)(2)</sup>
Quinta Ace 135	7.1 <sup>(1)</sup> - 7.4
Quinta Ace 160	6.9 <sup>(1)</sup> - 7.2
(1) Nominal value (2) These values are only applicable when the fan speeds have been set for BREEAM.	

**Caution**

The O<sub>2</sub> values at part load must be higher than the O<sub>2</sub> values at full load.

- If the measured value is outside of the values given in the table, correct the gas/air ratio.

Fig.31 Location of adjusting screw B

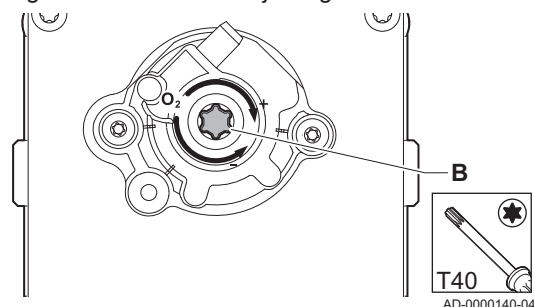

4. Use adjusting screw **B** to set the percentage of  $O_2$  for the gas type being used to the nominal value. This must always be between the highest and lowest setting limit.
5. Check the flame through the inspection glass. The flame must not blow off.
6. Repeat the full load test and the low load test as often as necessary until the correct values are obtained.
7. Measure the CO value in the flue gasses. If the CO level is above 400 ppm perform the following actions:

**Important**

The CO-concentration in the flue gasses must always comply with the installation regulations of the country in which the boiler is installed.


- 7.1. Check if the flue gas discharge system is installed correctly.
- 7.2. Check if the used gas type matches with the boiler settings.
- 7.3. Check the burner for damage and clean the burner.
- 7.4. Recheck the gas/air ratio setting.
- 7.5. Contact your supplier if the CO level is still above 400 ppm.

**Danger**

If the CO level is above 1000 ppm, switch off the boiler and contact your supplier.

### 7.3.6 Checking the air pressure differential switch

Fig.32 Check the air pressure differential switch + side

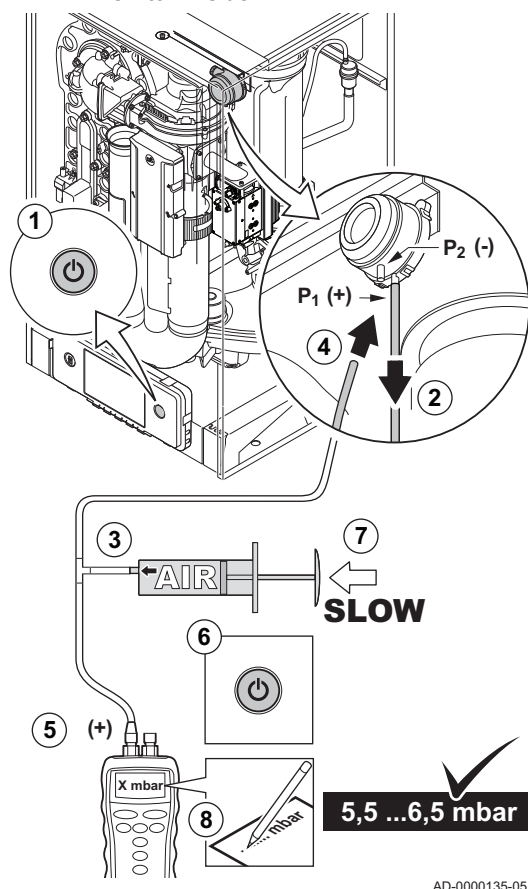

#### ■ Checking the air pressure differential switch + side


1. Switch off the boiler.
2. Disconnect the silicon hose on the + side (**P1**) of the air pressure differential switch.
3. Take a large plastic syringe or bellows and connect a T piece with a hose connected.
4. Connect the + side of the air pressure differential switch to one end of the T piece with a hose.
5. On the other end of the T piece, connect the + side of a pressure gauge.
6. Turn on the boiler
7. Push the syringe or bellows in very slowly until the boiler goes into failure mode.
8. Make a note of the pressure indicated by the pressure gauge at that point. A switch pressure of between 5.5 and 6.5 mbar is fine. A lower or higher switch pressure indicates a problem with the air pressure differential switch.
9. After taking a measurement, detach the silicon hose from the T piece on the + side and reconnect the hose that was previously removed.

**Caution**

Please note: The + side (**P1**) is the rear connector nipple of the air pressure differential switch.

10. Remove any soiling from all connection points for hoses and the air pressure differential switch.
11. Check the condition and tightness of the hoses of the air pressure differential switch. Replace the hoses if necessary.

Fig.33 – side of the air pressure differential switch

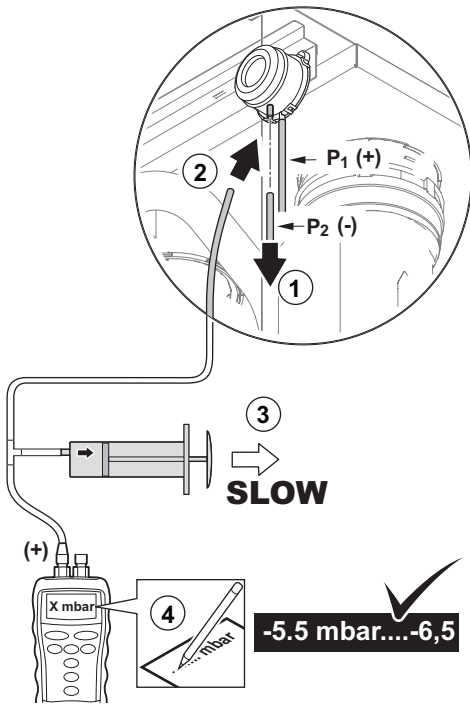


AD-0001076-01

### ■ Checking the air pressure differential switch – side

1. Disconnect the short, coloured silicon hose on the – side ( $P_2$ ) of the air pressure differential switch.
2. Connect the – side of the air pressure differential switch to one end of the T piece with a hose.
3. Pull out the syringe until the boiler goes into failure mode.
4. Make a note of the pressure indicated by the pressure gauge at that point.
  - ⇒ A switch pressure of between - 5.5 and - 6.5 mbar is fine. A lower or higher switch pressure indicates a problem with the air pressure differential switch.
5. After taking a measurement, detach the silicon hose from the T-piece on the – side and reconnect the coloured hose that was previously removed.
6. Remove any soiling from all connection points for hoses and the air pressure differential switch.
7. Check the condition and tightness of the hoses of the air pressure differential switch.
  - ⇒ Replace the hoses if necessary.

### 7.3.7 Checking the automatic air vent

Fig.34 Checking the automatic air vent

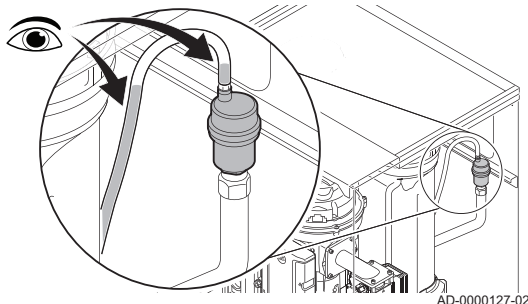


AD-0000127-02

1. Check the hose on top of the air vent.
2. The automatic air vent is leaking if water can be seen in the connected hose.
3. In the event of a leak, replace the air vent.

### 7.3.8 Checking the burner and cleaning the heat exchanger

Fig.35 Checking the burner

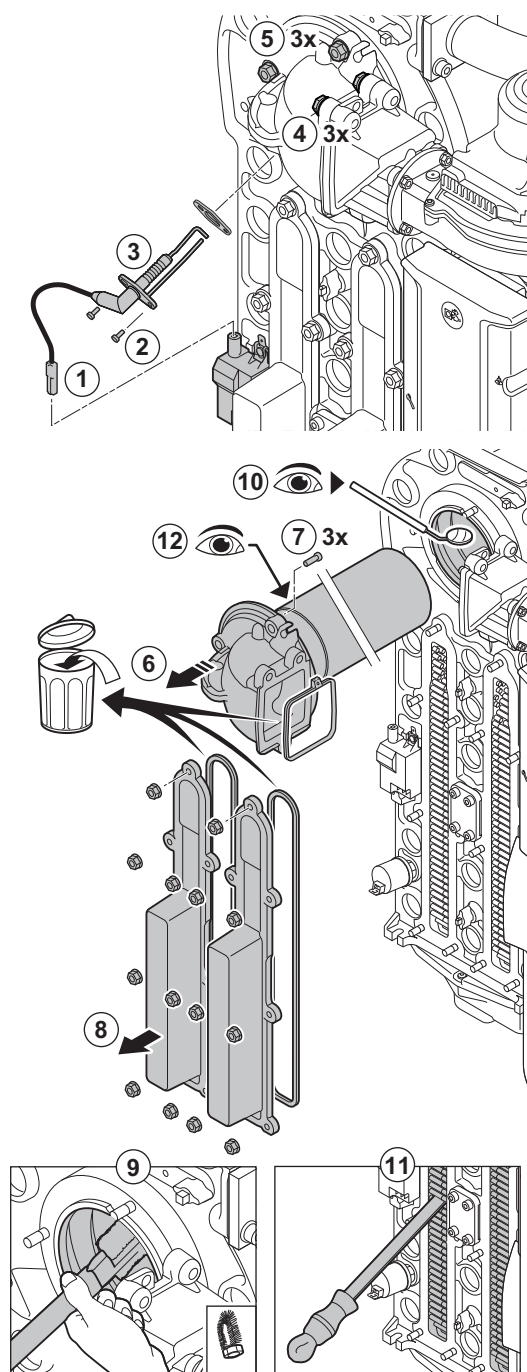

AD-0000128-02

1. Disconnect the plug of the ionisation/ignition electrode from the ignition transformer.



#### Caution

The ignition cable is fixed to the ionisation/ignition electrode and therefore may not be removed.

2. Loosen the 2 screws of the ionisation/ignition electrode.
3. Remove the ionisation/ignition electrode from the heat exchanger.
4. Undo the 3 bolts from the adapter on the non-return valve holder (15 Nm torque).
5. Undo the 3 nuts from the adapter on the heat exchanger (15 Nm torque).
6. Carefully remove the adapter with burner from the heat exchanger.
7. Remove the 3 bolts from the burner on the adapter and dismantle the burner.
8. Undo the nuts on the inspection ports (7.5 Nm torque).  
⇒ Remove the inspection ports to reach the heat exchanger.
9. Use a vacuum cleaner to clean the top part of the heat exchanger (furnace).
10. Check (using a mirror) whether any visible contamination has been left behind. If it has, remove it with the vacuum cleaner.
11. Clean the lower section of the heat exchanger with the special cleaning blade (accessory).
12. Burner maintenance is almost never required:
  - 12.1. If necessary, carefully clean the cylinder-shaped burner with compressed air.
  - 12.2. Check that the burner surface of the dismantled burner is free from cracks and/or damage. If not, replace the burner.
13. Reassemble the unit in the reverse order.
14. Open the gas supply and insert the plug in the socket again.




#### Caution

- Use the specified torques when fitting nuts and bolts.
- Make sure the gaskets are in place when fitting nuts and bolts.


### 7.3.9 Cleaning the condensate collector

Fig.36 Clean the connection nipple

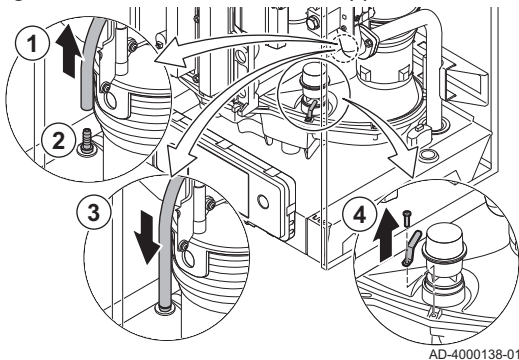

1. Disconnect the silicon hose of the air pressure differential switch from the connection nipple on the condensate collector.
2. Clean the opening of the connection nipple thoroughly (by blowing air or pushing an object through it).
3. Reconnect the silicon hose.
4. Remove the clip that locks the sealing cap.

Fig.37 Clean the condensate collector

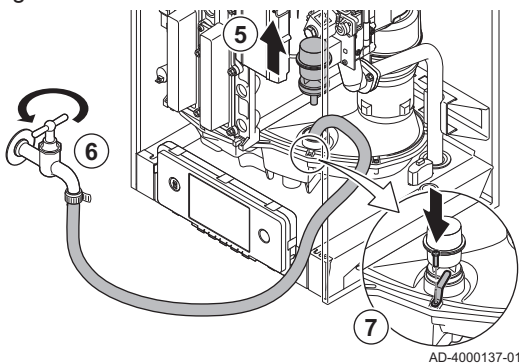

5. Remove the sealing cap from the condensate collector.
6. Rinse the condensate collector thoroughly with a water flow that is as large as possible.


**Warning**


During rinsing, avoid penetration of water into the boiler or the control panel.

7. Reassemble in reverse order.

### 7.3.10 Cleaning the siphon

Fig.38 Cleaning the siphon

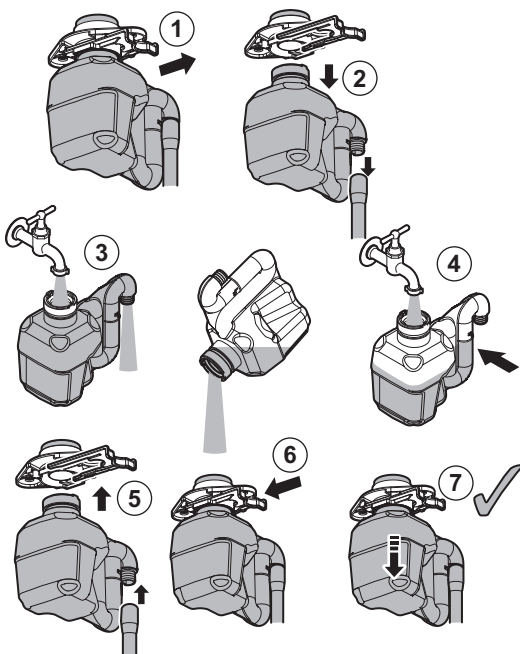

1. Pull the retainer clip of the siphon backwards.
2. Carefully pull the siphon and siphon hose downwards.
3. Clean the siphon with water.
4. Fill the siphon with water up to the mark.
5. Push the siphon firmly into the appropriate opening  underneath the boiler and install the siphon hose.
6. Push the retainer clip of the siphon forwards.
7. Check whether the siphon is firmly fitted in the boiler.

**Danger**


The siphon must always be filled with water. This prevents flue gases from entering the room.

## 7.4 Specific maintenance work

Perform the specific maintenance work if this proves to be necessary following the standard inspection and maintenance work. To conduct the specific maintenance work:

### 7.4.1 Replacing the ionisation/ignition electrode

Fig.39 Replacing the ionisation/ignition electrode

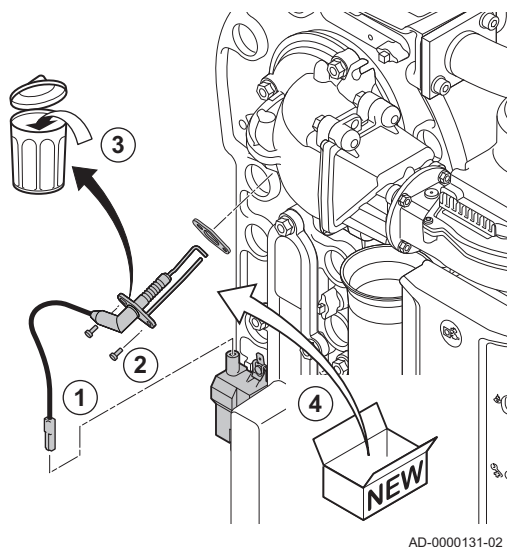

The ionisation/ignition electrode must be replaced if:

- The ionisation current is  $< 4 \mu\text{A}$ .
- The electrode is damaged or worn.
- The electrode is included in the service kit.

1. Remove the plug of the electrode from the ignition transformer.



**Important**


The ignition cable is fixed to the electrode and therefore may not be removed.

2. Unscrew the two screws on the electrode.
3. Remove the entire component.
4. Fit the new ionisation/ignition electrode.
5. Reassemble the unit in reverse order.

### 7.4.2 Checking the non-return valve

Check the condition of the non-return valve. Replace the non-return valve if it is defective, there is one in the service kit, or if there are traces of condensation on the inside of the fan. Do this as follows:

Fig.40 Checking the non-return valve

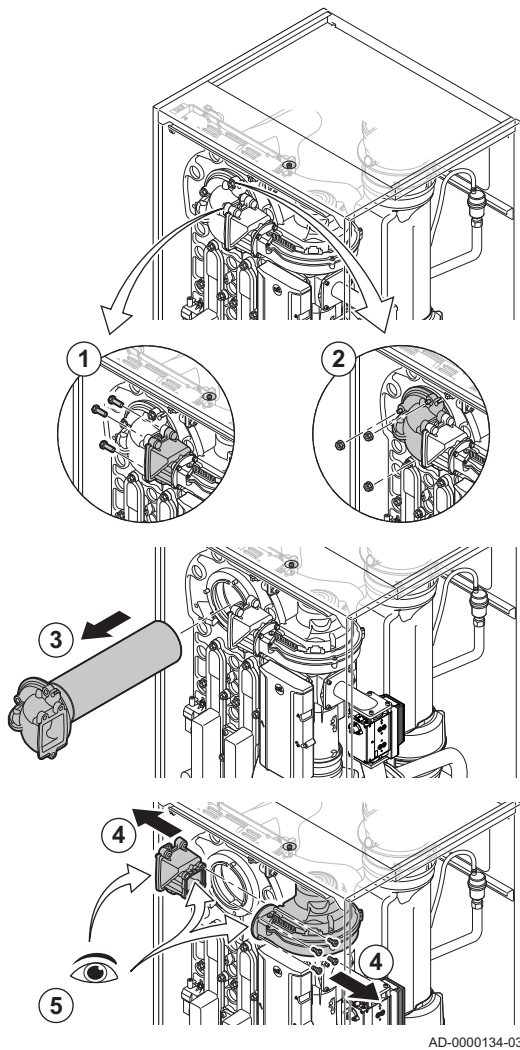

1. Undo the 3 bolts from the adapter on the non-return valve holder (15 Nm torque).
2. Undo the 3 nuts from the adapter on the heat exchanger (15 Nm torque).
3. Carefully remove the adapter with burner from the heat exchanger.
4. Remove the 4 bolts from the fan and remove the non-return valve holder (5.5 Nm torque).
5. Check whether traces of condensation are visible on the inside of the fan. Replace the non-return valve if there are visible traces of condensation.
6. Inspect the non-return valve and replace it in the event of a defect or damage.
7. When replacing the non-return valve, loosen the fixing screw of the non-return valve and remove it.
8. Reassemble in the reverse order.

**Caution**

- Use the specified torques when fitting nuts and bolts.
- Make sure the gaskets are in place when fitting nuts and bolts.

## 7.5 Finalising work

1. Fit all removed parts in the reverse order, but do not close the casing yet.

**Caution**

During inspection and maintenance operations, always replace all gaskets on the parts removed.

2. Fill the siphon with water.
3. Put the siphon back in place.
4. Carefully open all system and supply valves which were closed to carry out the maintenance.
5. Fill the central heating system with water if necessary.
6. Vent the central heating system.
7. Top up with more water if necessary.
8. Check the tightness of the gas and water connections.
9. Put the boiler back into operation.
10. Carry out an auto-detect when a control board has been replaced or removed from the boiler.
11. Set the boiler to full load and carry out a gas leak detection and a thorough visual check.
12. Set the boiler to normal operation.
13. Close the casing.

## 8 Troubleshooting

### 8.1 Error codes

The Quinta Ace is fitted with an electronic regulation and control unit. The heart of the control is a **e-Smart** microprocessor, which controls and also protects. In the event of an error, a corresponding code is displayed.

Tab.53 Error codes are displayed at three different levels

Code	Type	Description
A .00.00 <sup>(1)</sup>	Warning	The controls continue to operate, but the cause of the warning must be investigated. A warning can change into a blocking or lock-out.
H .00.00 <sup>(1)</sup>	Blocking	The controls will stop normal operation, and will check with set intervals if the cause of the blocking still exists. <sup>(2)</sup> Normal operation will resume when the cause of the blocking has been rectified. A blocking can become a lock-out.
E .00.00 <sup>(1)</sup>	Lock out	The controls will stop normal operation. The cause of the lock-out must be rectified and the controls must be reset manually.

(1) The first letter indicates the type of error.  
 (2) For some blocking errors, this checking interval is ten minutes. In those cases, it may seem that the controls do not start automatically. Wait ten minutes before resetting.

The meaning of the code can be found in the various error code tables.



#### Important

The error code is needed to find the cause of the error quickly and correctly and for any support from BAXI.

#### 8.1.1 Display of error codes

When an error occurs in the installation, the control panel will show the following:

- 1 The display will show a corresponding code and message.
- 2 The status LED of the control panel will show:
  - Continuous green = Normal operation
  - Flashing green = Warning
  - Continuous red = Blocking
  - Flashing red = Lock out

When an error occurs, proceed as follows:

1. Press and hold the ✓ button to reset the appliance.  
⇒ The appliance starts up again.
2. If the error code reappears, correct the problem by following the instructions in the error code tables.




#### Important

Only qualified professionals are authorised to work on the appliance and system.

⇒ The error code remains visible until the problem is solved.

3. Note the error code when the problem cannot be solved and contact your installer.


Fig.41 Error code display on HMI T-control

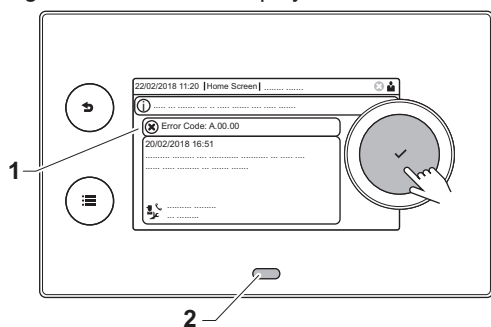

AD-3001379-01

### 8.1.2 Warning

Tab.54 Warning codes


Code	Display text	Description	Solution
A.01.21	Dhw Temp GradLevel3	Maximum Dhw Temperature Gradient Level3 Exceeded	Temperature warning: <ul style="list-style-type: none"> <li>• Check the flow.</li> </ul>
A.02.06	Water Press Warning	Water Pressure Warning active	Water pressure warning: <ul style="list-style-type: none"> <li>• Water pressure too low; check the water pressure</li> </ul>
A.02.18	OBD Error	Object Dictionary Error	Configuration error: <ul style="list-style-type: none"> <li>• Reset <b>CN1</b> and <b>CN2</b></li> </ul>  <b>See</b> The data plate for the <b>CN1</b> and <b>CN2</b> values.
A.02.37	Uncritic device lost	Uncritical device has been disconnected	SCB not found: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors</li> <li>• Faulty SCB: Replace SCB</li> </ul>
A.02.45	Full Can Conn Matrix	Full Can Connection Matrix	SCB not found: <ul style="list-style-type: none"> <li>• Carry out an auto-detect</li> </ul>
A.02.46	Full Can Device Adm	Full Can Device Administration	SCB not found: <ul style="list-style-type: none"> <li>• Carry out an auto-detect</li> </ul>
A.02.49	Failed Init Node	Failed Initialising Node	SCB not found: <ul style="list-style-type: none"> <li>• Carry out an auto-detect</li> </ul>
A.02.55	Invalid or miss SerNR	Invalid or missing device serial number	Contact your supplier.
A.03.17	Safety check	Periodically safety check ongoing	Safety check procedure active: <ul style="list-style-type: none"> <li>• No action</li> </ul>

### 8.1.3 Blocking

Tab.55 Blocking codes

Code	Display text	Description	Solution
H.00.36	T 2nd Return Open	Second return temperature sensor is either removed or measures a temperature below range	Second return temperature sensor open: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors.</li> <li>• Incorrectly fitted sensor: check that the sensor has been correctly fitted.</li> <li>• Faulty sensor: replace the sensor.</li> </ul>
H.00.37	T 2nd Return Closed	Second return temperature sensor is either shorted or measures a temperature above range	Second return temperature sensor short-circuited: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors.</li> <li>• Incorrectly fitted sensor: check that the sensor has been correctly fitted.</li> <li>• Faulty sensor: replace the sensor.</li> </ul>
H.01.00	Comm Error	Communication Error occurred	Communication error with the security kernel: <ul style="list-style-type: none"> <li>• Restart the boiler</li> <li>• Replace the CU-GH</li> </ul>

Code	Display text	Description	Solution
H.01.06	Max Delta TH-TF	Maximum difference between heat exchanger temperature and flow temperature	<p>Maximum difference between heat exchanger and flow temperature exceeded:</p> <ul style="list-style-type: none"> <li>• No flow or insufficient flow: <ul style="list-style-type: none"> <li>- Check the circulation (direction, pump, valves).</li> <li>- Check the water pressure.</li> <li>- Check the cleanliness of the heat exchanger.</li> <li>- Check that the installation has been de-aired.</li> <li>- Check water quality according to supplier's specifications.</li> </ul> </li> <li>• Sensor error: <ul style="list-style-type: none"> <li>- Check that the sensors are operating correctly.</li> <li>- Check that the sensor has been fitted properly.</li> </ul> </li> </ul>
H.01.07	Max Delta TH-TR	Maximum difference between heat exchanger temperature and return temperature	<p>Maximum difference between heat exchanger and return temperature exceeded:</p> <ul style="list-style-type: none"> <li>• No flow or insufficient flow: <ul style="list-style-type: none"> <li>- Check the circulation (direction, pump, valves).</li> <li>- Check the water pressure.</li> <li>- Check the cleanliness of the heat exchanger.</li> <li>- Check that the installation has been correctly vented to remove air.</li> </ul> </li> <li>• Sensor error: <ul style="list-style-type: none"> <li>- Check that the sensors are operating correctly.</li> <li>- Check that the sensor has been fitted properly.</li> </ul> </li> </ul>
H.01.08	CH Temp Grad. Level3	Maximum CH temperature gradient level3 exceeded	<p>Maximum heat exchanger temperature increase has been exceeded:</p> <ul style="list-style-type: none"> <li>• No flow or insufficient flow: <ul style="list-style-type: none"> <li>- Check the circulation (direction, pump, valves)</li> <li>- Check the water pressure</li> <li>- Check the cleanliness of the heat exchanger</li> <li>- Check that the central heating system has been correctly vented to remove air</li> </ul> </li> <li>• Sensor error: <ul style="list-style-type: none"> <li>- Check that the sensors are operating correctly</li> <li>- Check that the sensor has been fitted properly</li> </ul> </li> </ul>
H.01.09	Gas Pressure Switch	Gas Pressure Switch	<p>Gas pressure too low:</p> <ul style="list-style-type: none"> <li>• No flow or insufficient flow: <ul style="list-style-type: none"> <li>- Make sure that the gas valve is fully opened</li> <li>- Check the gas supply pressure</li> <li>- If a gas filter is present: Make sure that the filter is clean</li> </ul> </li> <li>• Wrong setting on the gas pressure switch: <ul style="list-style-type: none"> <li>- Make sure that the switch has been fitted properly</li> <li>- Replace the switch if necessary</li> </ul> </li> </ul>
H.01.13	Max THeat Ex	Heat Exchanger temperature has exceeded the maximum operating value	<p>Maximum heat exchanger temperature exceeded:</p> <ul style="list-style-type: none"> <li>• Check the circulation (direction, pump, valves).</li> <li>• Check the water pressure.</li> <li>• Check that the sensors are operating correctly.</li> <li>• Check that the sensor has been fitted properly.</li> <li>• Check the cleanliness of the heat exchanger.</li> <li>• Check that the central heating system has been correctly vented to remove air.</li> </ul>


Code	Display text	Description	Solution
H.01.14	Max Tflow	Flow temperature has exceeded the maximum operating value	Flow temperature sensor above normal range: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors</li> <li>• No flow or insufficient flow: <ul style="list-style-type: none"> <li>- Check the circulation (direction, pump, valves)</li> <li>- Check the water pressure</li> <li>- Check the cleanliness of the heat exchanger</li> </ul> </li> </ul>
H.01.15	Max Tflue Gas	Flue gas temperature has exceeded the maximum operating value	Maximum flue gas temperature exceeded: <ul style="list-style-type: none"> <li>• Check the flue gas outlet system</li> <li>• Check the heat exchanger to ensure that the flue gas side is not clogged</li> <li>• Faulty sensor: replace the sensor</li> </ul>
H.02.00	Reset In Progress	Reset In Progress	Reset procedure active: <ul style="list-style-type: none"> <li>• No action</li> </ul>
H.02.02	Wait Config Number	Waiting For Configuration Number	Configuration error or unknown configuration number: <ul style="list-style-type: none"> <li>• Reset <b>CN1</b> and <b>CN2</b></li> </ul>
H.02.03	Conf Error	Configuration Error	Configuration error or unknown configuration number: <ul style="list-style-type: none"> <li>• Reset <b>CN1</b> and <b>CN2</b></li> </ul>
H.02.05	CSU CU mismatch	CSU does not match CU type	Configuration error: <ul style="list-style-type: none"> <li>• Reset <b>CN1</b> and <b>CN2</b></li> </ul>
H.02.09	Partial block	Partial blocking of the device recognized	Blocking input active or frost protection active: <ul style="list-style-type: none"> <li>• External cause: remove external cause</li> <li>• Wrong parameter set: check the parameters</li> <li>• Bad connection: check the connection</li> </ul>
H.02.10	Full Block	Full blocking of the device recognized	Blocking input is active (without frost protection): <ul style="list-style-type: none"> <li>• External cause: remove external cause</li> <li>• Wrong parameter set: check the parameters</li> <li>• Bad connection: check the connection</li> </ul>
H.02.12	Release Signal	Release Signal input of the Control Unit from device external environment	Waiting time release signal has elapsed: <ul style="list-style-type: none"> <li>• External cause: remove external cause</li> <li>• Wrong parameter set: check the parameters</li> <li>• Bad connection: check the connection</li> </ul>
H.02.18	OBD Error	Object Dictionary Error	<ul style="list-style-type: none"> <li>• Reset <b>CN1</b> and <b>CN2</b></li> </ul>  <b>See</b> The data plate for the <b>CN1</b> and <b>CN2</b> values.
H.02.36	Funct device lost	Functional device has been disconnected	Communication error with the SCB PCB: <ul style="list-style-type: none"> <li>• Bad connection with BUS: check the wiring.</li> <li>• No PCB: reconnect PCB or retrieve from memory using auto-detect.</li> </ul>
H.02.48	Funct Gr Conf Fault	Function Group Configuration Fault	SCB not found: <ul style="list-style-type: none"> <li>• Carry out an auto-detect</li> </ul>
H.02.50	Funct Gr Comm Err	Function Group Communication Error	SCB not found: <ul style="list-style-type: none"> <li>• Carry out an auto-detect.</li> </ul>
H.03.00	Parameter Error	Safety parameters level 2, 3, 4 are not correct or missing	Parameter error: security kernel <ul style="list-style-type: none"> <li>• Restart the boiler</li> <li>• Replace the CU-GH</li> </ul>
H.03.01	CU to GVC data error	No valid data from CU to GVC received	Communication error with the CU-GH: <ul style="list-style-type: none"> <li>• Restart the boiler</li> </ul>

Code	Display text	Description	Solution
H.03.02	Flame loss detected	Measured ionisation current is below limit	No flame during operation: <ul style="list-style-type: none"> <li>• No ionisation current: <ul style="list-style-type: none"> <li>- Vent the gas supply to remove air</li> <li>- Check that the gas valve is fully opened</li> <li>- Check the gas supply pressure</li> <li>- Check the operation and setting of the gas valve unit</li> <li>- Check that the air supply inlet and flue gas outlet are not blocked</li> <li>- Check that there is no recirculation of flue gases</li> </ul> </li> </ul>
H.03.05	Internal blocking	Gas Valve Control internal blocking occurred	Security kernel error: <ul style="list-style-type: none"> <li>• Restart the boiler</li> <li>• Replace the CU-GH</li> </ul>

### 8.1.4 Locking

Tab.56 Locking codes

Code	Display text	Description	Solution
E.00.00	TFlow Open	Flow temperature sensor is either removed or measures a temperature below range	Zone flow temperature sensor open: <ul style="list-style-type: none"> <li>• Sensor is not present.</li> <li>• Wrong <b>Zone Function</b> setting: check the setting of parameter <b>CP02x</b>.</li> <li>• Bad connection: check the wiring and connectors.</li> <li>• Incorrectly fitted sensor: make sure that the sensor has been correctly fitted.</li> <li>• Faulty sensor: replace the sensor.</li> </ul>
E.00.01	TFlow Closed	Flow temperature sensor is either shorted or measures a temperature above range	Zone flow temperature sensor short-circuited: <ul style="list-style-type: none"> <li>• Sensor is not present.</li> <li>• Bad connection: check the wiring and connectors.</li> <li>• Incorrectly fitted sensor: check that the sensor has been correctly fitted.</li> <li>• Faulty sensor: replace the sensor.</li> </ul>
E.00.04	TReturn Open	Return temperature sensor is either removed or measures a temperature below range	Return temperature sensor open: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors</li> <li>• Incorrectly fitted sensor: check that the sensor has been correctly fitted</li> <li>• Faulty sensor: replace the sensor</li> </ul>
E.00.05	TReturn Closed	Return temperature sensor is either shorted or measures a temperature above range	Return temperature sensor short-circuited: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors</li> <li>• Incorrectly fitted sensor: check that the sensor has been correctly fitted</li> <li>• Faulty sensor: replace the sensor</li> </ul>
E.00.08	THeat Ex Open	Heat exchanger temperature sensor is either removed or measures a temperature below range	Heat exchanger temperature sensor open: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors.</li> <li>• Incorrectly fitted sensor: check that the sensor has been correctly fitted.</li> <li>• Faulty sensor: replace the sensor.</li> </ul>

Code	Display text	Description	Solution
E.00.09	THeat Ex Closed	Heat exchanger temperature sensor is either shorted or measures a temperature above range	Heat exchanger temperature sensor short-circuited: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors.</li> <li>• Incorrectly fitted sensor: check that the sensor has been correctly fitted.</li> <li>• Faulty sensor: replace the sensor.</li> </ul>
E.00.40	WaterPressureOpen	Water pressure sensor is either removed or measures a temperature below range	Hydraulic pressure sensor open: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors.</li> <li>• Incorrectly fitted sensor: check that the sensor has been correctly fitted.</li> <li>• Faulty sensor: replace the sensor.</li> </ul>
E.00.41	WaterPressureClosed	Water pressure sensor is either shorted or measures a temperature above range	Hydraulic pressure sensor short-circuited: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors.</li> <li>• Incorrectly fitted sensor: check that the sensor has been correctly fitted.</li> <li>• Faulty sensor: replace the sensor.</li> </ul>
E.01.04	5x Flame Loss Error	5x Error of unintended Flame Loss occurrence	Flame loss occurs 5 times: <ul style="list-style-type: none"> <li>• Vent the gas supply to remove air</li> <li>• Check that the gas valve is fully opened</li> <li>• Check the gas supply pressure</li> <li>• Check the operation and setting of the gas valve unit</li> <li>• Check that the air supply inlet and flue gas outlet are not blocked</li> <li>• Check that there is no recirculation of flue gases</li> </ul>
E.01.12	Return Higher Flow	Return temperature has a higher temperature value than the flow temperature	Flow and return reversed: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors</li> <li>• Water circulation in wrong direction: check the circulation (direction, pump, valves)</li> <li>• Incorrectly fitted sensor: check that the sensor has been correctly fitted</li> <li>• Malfunctioning sensor: check the Ohmic value of the sensor</li> <li>• Faulty sensor: replace the sensor</li> </ul>
E.02.04	Parameter Error	Parameter Error	Configuration error: <ul style="list-style-type: none"> <li>• Reset <b>CN1</b> and <b>CN2</b></li> </ul>  <b>See</b> The data plate for the <b>CN1</b> and <b>CN2</b> values.
E.02.13	Blocking Input	Blocking Input of the Control Unit from device external environment	Blocking input is active: <ul style="list-style-type: none"> <li>• External cause: remove external cause</li> <li>• Wrong parameter set: check the parameters</li> </ul>
E.02.15	Ext CSU Timeout	External CSU Timeout	CSU time out: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors</li> <li>• Faulty CSU: Replace CSU</li> </ul>
E.02.17	GVC CommTimeout	Gas Valve Control unit communication has exceeded feedback time	Communication error with the security kernel: <ul style="list-style-type: none"> <li>• Restart the boiler</li> <li>• Replace the CU-GH</li> </ul>
E.02.35	Safety device lost	Safety critical device has been disconnected	Communication fault <ul style="list-style-type: none"> <li>• Carry out an auto-detect</li> </ul>

Code	Display text	Description	Solution
E.02.47	Failed Conn Funct Gr	Failed Connecting Function Groups	Function group not found: <ul style="list-style-type: none"> <li>• Carry out an auto-detect</li> <li>• Restart the boiler</li> <li>• Replace the CU-GH</li> </ul>
E.02.48	Funct Gr Conf Fault	Function Group Configuration Fault	SCB not found: <ul style="list-style-type: none"> <li>• Carry out an auto-detect.</li> </ul>
E.02.52	Gvc Burner Prof Err	Gvc Burner Profile Error	-
E.04.00	Parameter error	Safety parameters Level 5 are not correct or missing	Replace the CU-GH.
E.04.01	TFlow Closed	Flow temperature sensor is either shorted or measuring a temperature above range	Flow temperature sensor short circuited: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors</li> <li>• Incorrectly fitted sensor: check that the sensor has been correctly fitted</li> <li>• Faulty sensor: replace the sensor</li> </ul>
E.04.02	TFlow Open	Flow temperature sensor is either removed or measuring a temperature below range	Flow temperature sensor open: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors</li> <li>• Faulty sensor: replace the sensor</li> </ul>
E.04.03	Max Flow temp	Measured flow temperature above safety limit	No flow or insufficient flow: <ul style="list-style-type: none"> <li>• Check the circulation (direction, pump, valves)</li> <li>• Check the water pressure</li> <li>• Check the cleanliness of the heat exchanger</li> </ul>
E.04.06	Max Flue temp	Measured flue temperature above limit	-
E.04.07	TFlow Sensor	Deviation in flow sensor 1 and flow sensor 2 detected	Flow temperature sensor deviation: <ul style="list-style-type: none"> <li>• Bad connection: check the connection</li> <li>• Faulty sensor: replace the sensor</li> </ul>
E.04.08	Safety input	Safety input is open	Air pressure differential switch activated: <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors</li> <li>• Pressure in flue gas duct is or was too high: <ul style="list-style-type: none"> <li>- Non-return valve does not open</li> <li>- Trap blocked or empty</li> <li>- Check that the air supply inlet and flue gas outlet are not blocked</li> <li>- Check the cleanliness of the heat exchanger</li> </ul> </li> </ul>

Code	Display text	Description	Solution
E.04.10	Unsuccessful start	5 Unsuccessful burners starts detected	<p>Five failed burner starts:</p> <ul style="list-style-type: none"> <li>• No ignition spark: <ul style="list-style-type: none"> <li>- Check the wiring between the CU-GH and the ignition transformer</li> <li>- Check the ionisation/ignition electrode</li> <li>- Check breakdown to earth</li> <li>- Check the condition of the burner cover</li> <li>- Check the earthing</li> <li>- Replace the CU-GH</li> </ul> </li> <li>• Ignition spark but no flame: <ul style="list-style-type: none"> <li>- Vent the gas pipes to remove air</li> <li>- Check that the air supply inlet and flue gas outlet are not blocked</li> <li>- Check that the gas valve is fully opened</li> <li>- Check the gas supply pressure</li> <li>- Check the operation and setting of the gas valve unit</li> <li>- Check the wiring on the gas valve unit</li> <li>- Replace the CU-GH</li> </ul> </li> <li>• Flame present, but ionisation has failed or is inadequate: <ul style="list-style-type: none"> <li>- Check that the gas valve is fully opened</li> <li>- Check the gas supply pressure</li> <li>- Check the ionisation/ignition electrode</li> <li>- Check the earthing</li> <li>- Check the wiring on the ionisation/ignition electrode.</li> </ul> </li> </ul>
E.04.11	VPS	VPS Gas Valve proving failed	<p>Gas leakage control fault:</p> <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors</li> <li>• Gas leakage control VPS faulty: Replace the valve proving system (VPS)</li> <li>• Gas valve unit faulty: Replace the gas valve unit</li> </ul>
E.04.12	False flame	False flame detected before burner start	<p>False flame signal:</p> <ul style="list-style-type: none"> <li>• The burner remains very hot: Set the O<sub>2</sub></li> <li>• Ionisation current measured but no flame should be present: check the ionisation/ignition electrode</li> <li>• Faulty gas valve: replace the gas valve</li> <li>• Faulty ignition transformer: replace the ignition transformer</li> </ul>
E.04.13	Fan	Fan speed has exceeded normal operating range	<p>Fan fault:</p> <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors.</li> <li>• Fan operates when it should not be operating: check for excessive chimney draught</li> <li>• Faulty fan: replace the fan</li> </ul>
E.04.14	Combustion Error	The burner temperature and setpoint differ more than 60s regarding GVC configuration	-
E.04.15	FlueGas Pipe Blocked	The flue gas pipe is blocked	<p>Flue gas outlet is blocked:</p> <ul style="list-style-type: none"> <li>• Check that the flue gas outlet is not blocked</li> <li>• Restart the boiler</li> </ul>
E.04.17	GasValve Driver Err.	The driver for the gas valve is broken	<p>Gas valve unit fault:</p> <ul style="list-style-type: none"> <li>• Bad connection: check the wiring and connectors</li> <li>• Faulty gas valve unit: Replace the gas valve unit</li> </ul>

Code	Display text	Description	Solution
E.04.23	Internal Error	Gas Valve Control internal locking	<ul style="list-style-type: none"> <li>Restart the boiler</li> <li>Replace the CU-GH</li> </ul>
E.04.250	Internal error	Gas valve relay error detected	Internal error: <ul style="list-style-type: none"> <li>Replace the PCB.</li> </ul>
E.04.254	Unknown	Unknown	Unknown error: <ul style="list-style-type: none"> <li>Replace the PCB.</li> </ul>

## 8.2 Error history

The control panel has an error history that stores the last 32 errors. Specific details are stored for each error, for example:

- Status
- Sub-status
- Flow temperature
- Return temperature

These details and others can contribute to the error solution.

### 8.2.1 Reading out and clearing the error history

You can read out the errors on the control panel. The error history can also be cleared.

#### ▶▶ ≡ > Error History




Use the rotary knob to navigate.

Use the ✓ button to confirm your selection.

1. Press the ≡ button.
2. Select **Error History**.  
Enable installer access if **Error History** is not available.
  - 2.1. Select **Enable installer access**.
  - 2.2. Use code **0012**.  
⇒ A list up to 32 most recent errors is displayed with:
    - The error code.
    - A short description.
    - The date.
3. Select the error code you want to investigate.  
⇒ The display shows an explanation of the error code and several details of the appliance when the error occurred.
4. To clear the error memory, press and hold the ✓ button.


Fig.42 Error details

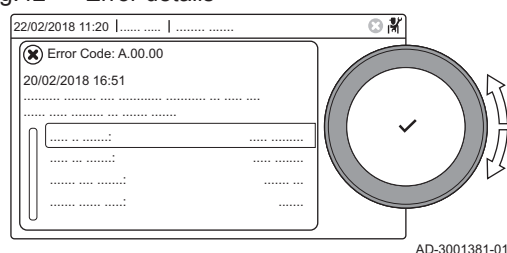

## 9 Technical specifications

### 9.1 Electrical diagram

Fig.43 Electrical diagram

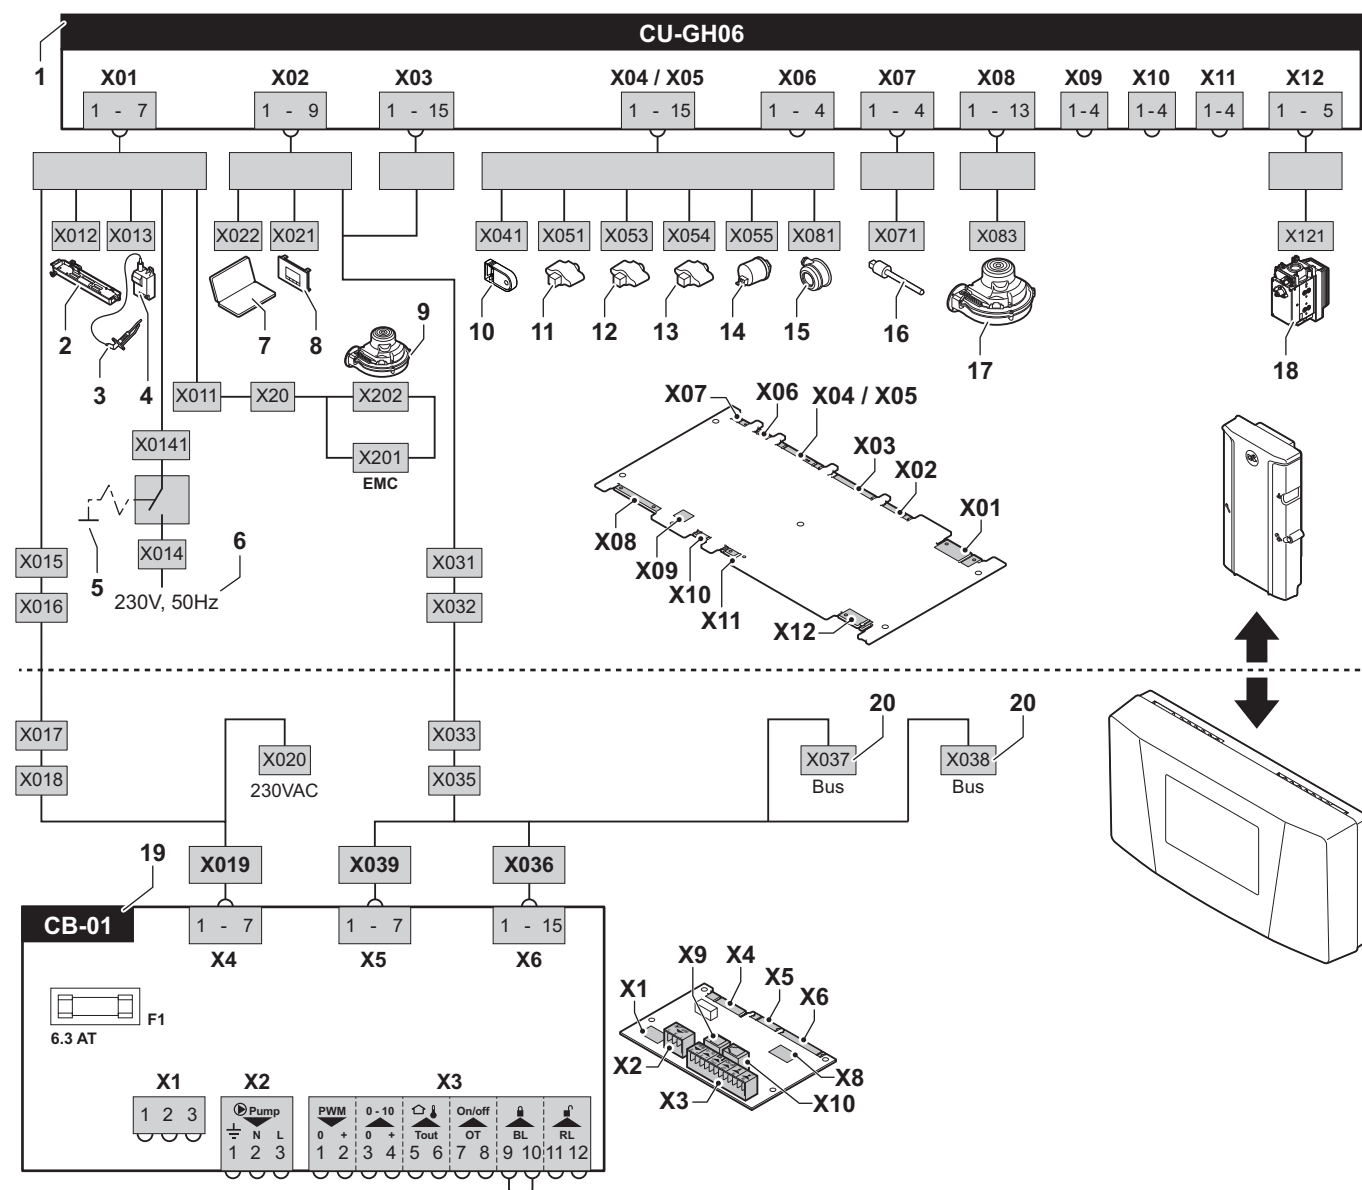

AD-0000669-07

- |    |   |    |                                       |
|----|---|----|---------------------------------------|
| 1  | Control unit                            | 11 | Flow sensor                           |
| 2  | Lighting                                | 12 | Heat exchanger sensor                 |
| 3  | Ignition pin                            | 13 | Return sensor                         |
| 4  | Ignition transformer                    | 14 | Hydraulic pressure sensor             |
| 5  | On/off switch                           | 15 | Air pressure differential switch      |
| 6  | Power supply                            | 16 | Flue gas sensor                       |
| 7  | Service connector / computer connection | 17 | Fan control                           |
| 8  | Control panel                           | 18 | Gas valve                             |
| 9  | Fan supply                              | 19 | Standard PCB                          |
| 10 | Storage parameter                       | 20 | L-bus connections for additional PCBs |

## 10 Spare parts

---

### 10.1 General

---


Only replace defective or worn boiler parts with original parts or recommended parts.

**Important**

When ordering a part, you must state the part number that appears in the list beside the position number of the required part.

## 10.2 Parts

Fig.44 Quinta Ace 135 - 160

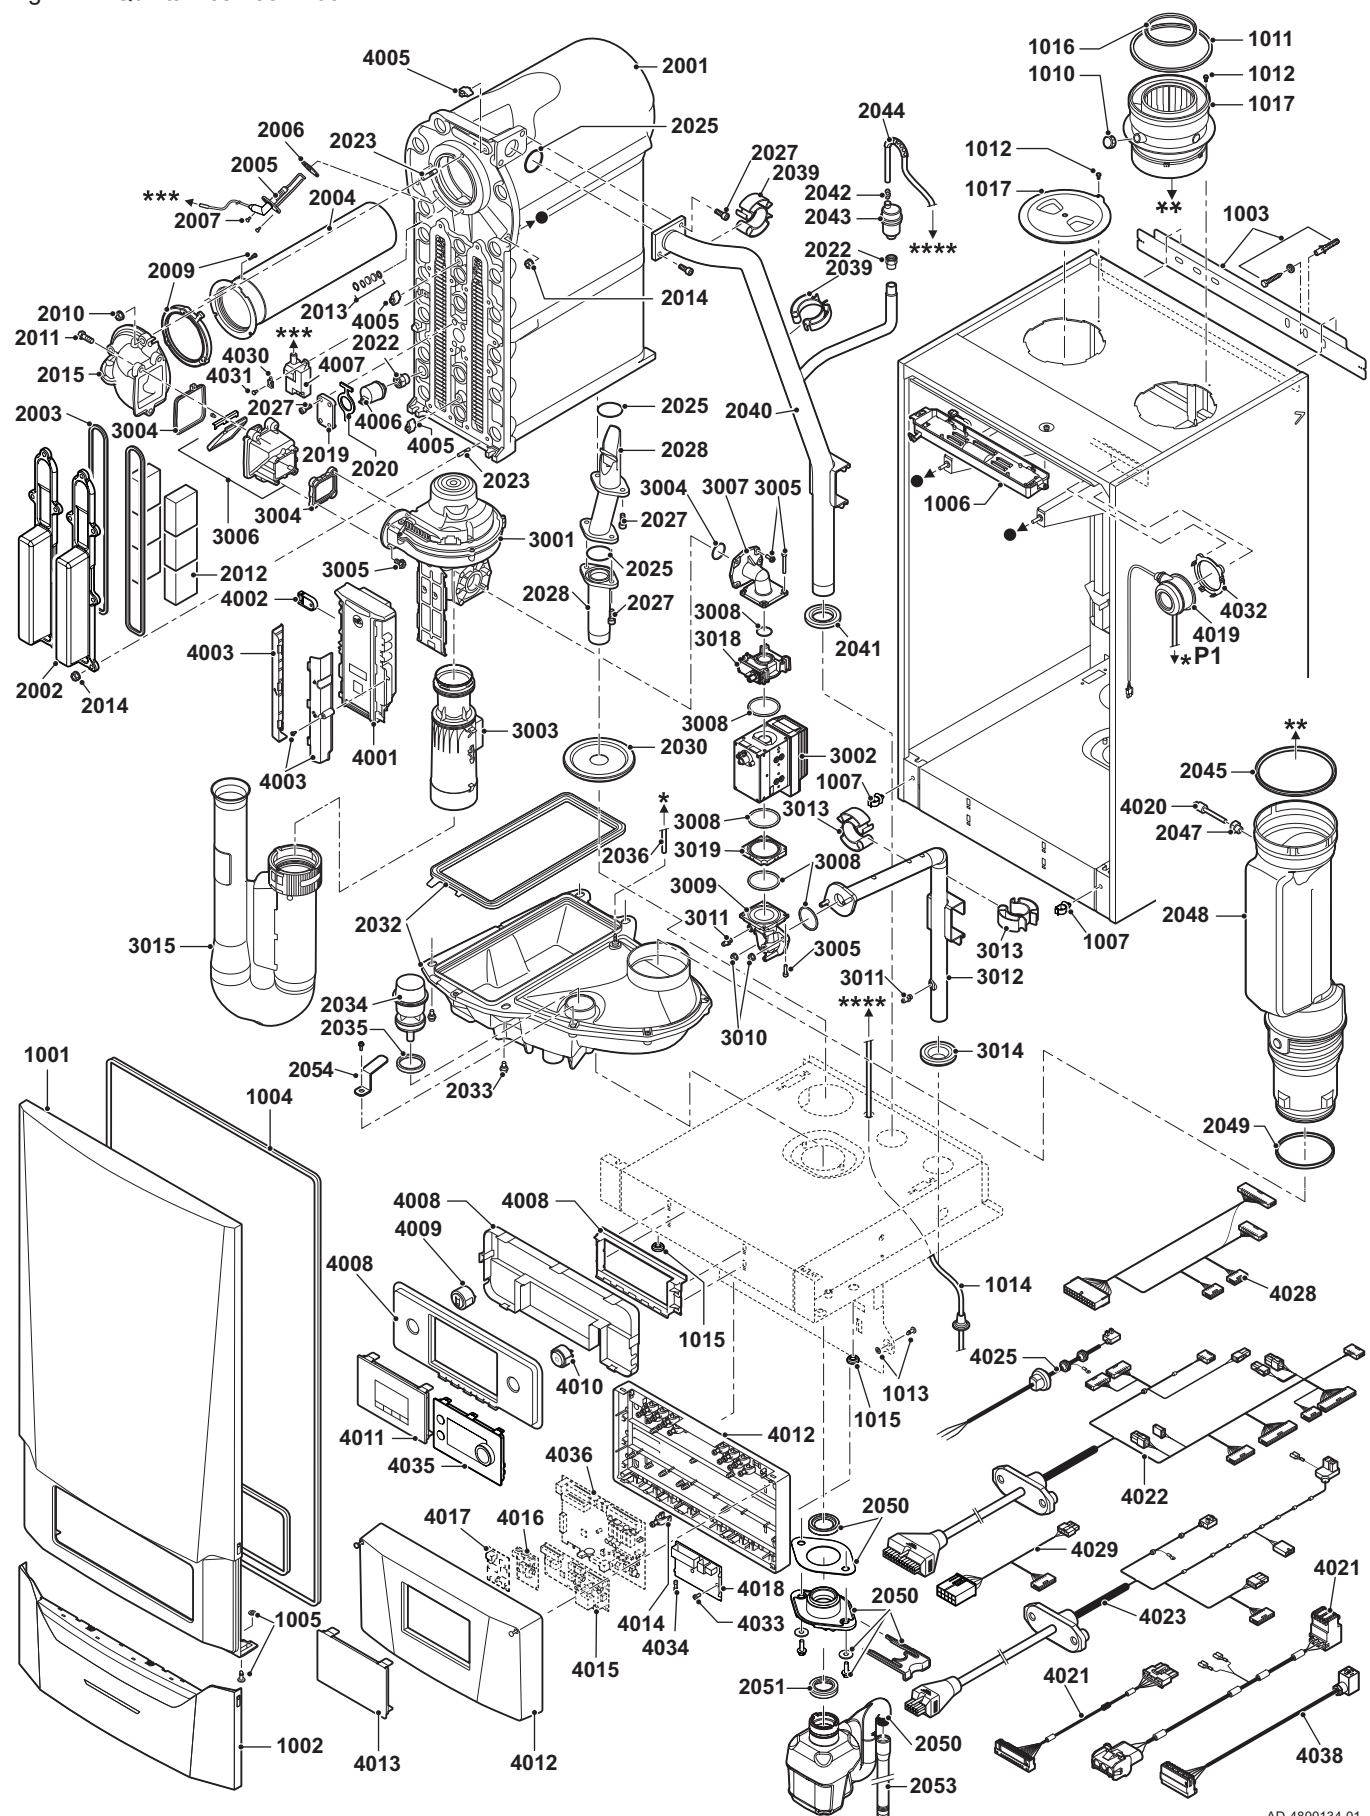

AD-4800134-01






**Original instructions - © Copyright**

All technical and technological information contained in these technical instructions, as well as any drawings and technical descriptions supplied, remain our property and shall not be multiplied without our prior consent in writing. Subject to alterations.


 0345 070 1055

 [www.baxi.co.uk](http://www.baxi.co.uk)

 Brooks House  
Coventry Road  
Warwick CV34 4LL

 01 459 0870

 [www.baxi.ie](http://www.baxi.ie)

 Unit F 5&6,  
Calmount Park, Calmount Road,  
Ballymount, Dublin 12



**BAXI**

